

BX2174 Installation Instructions 2003 - 04 Lincoln Aviator

Serial No.

The front fascia and metal bumper are removed for baseplate installation. Drilling is required. Trimming of air dam and fascia is required. The BX8869 is available for the vehicle. Attachment Tabs are 18 inches center to center and a height of 21 1/2 inches. **Some models may have tow hooks. Tow**

hooks will be removed and not reinstalled.



1. Remove the black plastic cover between the head lights, pull cover forward to release the snaps and set aside.



3. Just forward of front tires on wheel well are two christmas tree push pins to remove, both cides



5. Remove one push pin from lower corner of front fascia, both sides.



2. Remove the four push pins from the top edge of fascia, between head lights.




4. Pull wheel well cover back in front of tire and remove one metric bolt from corner of fascia with the 10MM socket, both sides.



6. Remove two metric bolts from lower edge of fascia with the 10MM socket. Pull fascia forward and set aside.

Go RVing



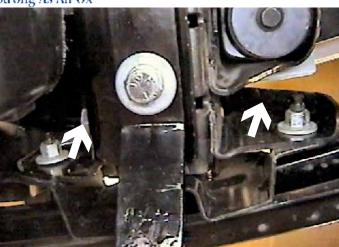

7. Using the 15MM socket, remove the two metric bolt from the back side of bumper bracket, both sides and set metal bumper aside.



8. Using the reciprocating saw, remove 1 1/8" of the inside lip on the back side of bumper bracket (view of passenger's side bracket).




9. Hold baseplate and convenience links to align with existing holes on the bottom side of frame, both sides. Insert nut plates into frame end to align with these holes, insert 1/2" x 2 1/2" hex bolts, 1/2" flat and lock washers into aligned holes to nut plates and tighten, both sides. Use loctite on all bolts and tighten according to the Torque Chart in the General Instruction sheet. Some models may have tow hooks. Tow hooks will be removed and not reinstalled.




10. Using the baseplate as a template, drill hole into the frame with the 17/32" drill bit, both sides. Insert 1/2" nut plate into frame end to align with drilled hole, insert 1/2" x 1 3/4" hex bolt and lock washer into drilled hole and tighten. Be sure and use loctite on all bolts. Tighten all bolts according to Torque Chart in the General Instruction sheet.



- 11. Models that do not have tow hooks will cutting of the openings on lower fascia. Cut lower part of opening with the utility knife. Reinstall fascia. Be sure all electrical components are plugged in properly.
- **12.** The dimensional variations between otherwise identical cars can be considerable. While the location and size of the holes in the baseplate were designed to allow for easy installation, it may be necessary to file a hole slightly to allow a bolt to clear.
- 13. Install the tow bar and safety cables according to the instructions included in their packages.
- 14. Do not substitute other devices if the tow bar pin and clip are lost.
- 15. DEALER OR INSTALLER: BE CERTAIN THE USER RECEIVES THE INSTRUCTION SHEET.

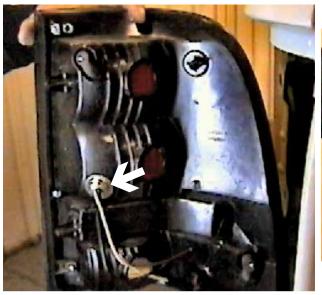

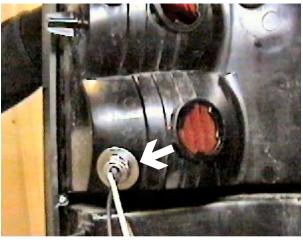

Location for the Bx8869 on driver's side tail light assembly. (Right photo is a closer view of driver's side.)




Tools Required

10MM Socket 15MM Socket Reciprocating Saw 3/4" Socket Loctite

Utility Knife 17/32" Drill Bit

Parts List

Ref. No.	Qty.	Part No.	Description
1	1	61-6005	Weldment, Base Plate, BX2174
2	6	61-3799	Weldment 1/2" Nut Plate, with 10" Wire
3	2	102-6526	
4	2	201-0068	
5	4		
6	4		1/2" Flat Washer, ZP
7	6	203-0012	1/2" Lock Washer, ZP
8	2	201-0979	#12-14 x 1" Self Drilling Screw, ZP
9	2		#10-32 Hex Nut
10	2	203-0054	#10 Lock Washer
11	2	201-0192	#10-32 x 1/2 Slot, Rd. Hd. Screw
12	2		Adapter, 4 Way Connector
13	2	62-3469	Attachment, Assembly, SF/ LB (R)
	2	226-0046	Baseplate Safety Cable, 36" CL III (Not Shown)
	2	229-0359	Quicklink, 3/8, ZP (Not Shown)
	2	290-0437	Receiver Can Plug (RLK) (Not Shown)

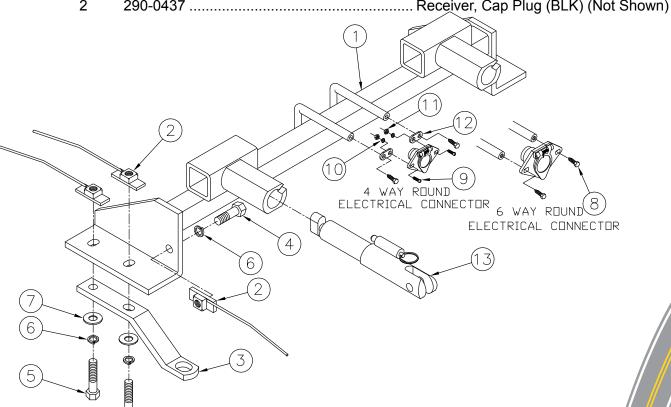

IMPORTANT: Use only genuine factory replacement parts on your Base Plate. Do not substitute homemade or nontypical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your Base Plate, be sure to use a replacement bolt of the same grade (Usually Grade 5, refer to parts list). Repair parts may be ordered through your nearest **Blue Ox** dealer or distributor.

© 2004 Blue Ox Division, Automatic Equipment Mfg. Co. • One Mill Road, Industrial Park Pender, Nebraska 68047 • Phone 402-385-3051 • Fax 402-385-3360 • www.blueox.us



General Information

- 1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

- 1. It is YOUR responsibility to watch for:
 - Oil cooler and air conditioner lines
 - Electrical wires and hoses
 - Missing parts or attaching points on the frame
 - ** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.

