

Please read BOTH these Installation Instructions and the General Towing Instructions before attempting to install or operate this equipment.

- Blue Ox[®] towing products and accessories are intended to be installed by Blue Ox[®] Dealers who are familiar with our products and have the equipment and knowledge to do "fit work". When necessary, Blue Ox[®] Dealers can be found at www.blueox.com or by contacting our Customer Care Department at (402) 385-3051.
- Many Blue Ox[®] Baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use hardware supplied in the hardware kit or existing hardware specified in the Baseplate Installation Instructions.

Confirm the towability and pre-towing procedures for your vehicle with the owner's manual or contact the vehicle's manufacturer for specific towing procedures.



If the front of your vehicle looks different than this, call us at (402) 385-3051.

Attachment Tab Height:	16"	
Attachment Tab Width	19"	



Bolt Torque Specifications

Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
14MM	89	117

Bolt Torque Specifications Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4"	10	14
5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230




Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.



Parts List

Ref. No.	Qty.	Part #	Description
1	4	61-5208	3/8" Nut Plate, with Wire
2	1	61-6336	Weldment, Base Plate, BX2246
3	2	62-3468	Attachment, Assembly, SF/SB (R)
4	1	102-7056	Breakaway Bracket, BX2246
5	2	201-0050	1/4-20 X 3/4 Hex Bolt Grd.5, ZP
6	2	201-0192	#10-32 x 1/2 Slot, Rd. Hd. Screw
7	4	201-0368	3/8-16 x 1 1/4" Hex Bolt, Grd. 5, ZP
8	4	201-0443	3/8-16 x 1" Hex Bolt, Grd. 5, ZP
9	2	201-0979	#12-14 x 1" Self Drilling Screw, ZP
10	4	202-0003	3/8-16 Hex Nut, ZP
11	2	202-0047	#10-32 Hex Nut
12	2	202-0102	1/4-20 Hex Nyl Nut, ZP
13	8	203-0010	3/8" Lock Washer
14	2	203-0054	#10 Lock Washer
15	1	299-0685	Electrical Bracket, ZP
16	2	226-0046	Permanent Baseplate Safety Cables (Not Shown)
17	2	229-0359	3/8" Quick Link (Not Shown)
18	2	290-0437	Cap Plug, Plug (Not Shown)

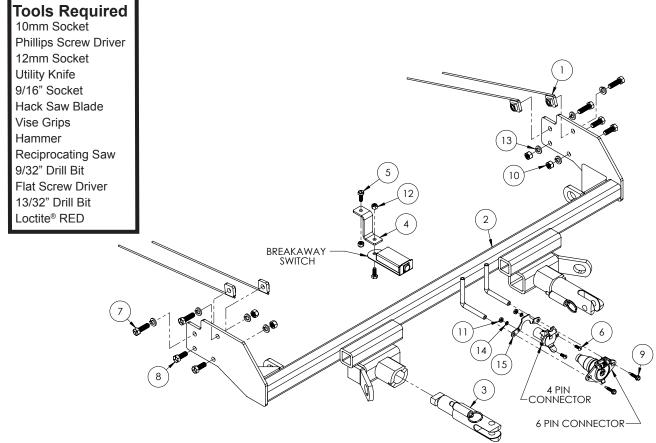

Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.



Installation Notes: The fascia, air baffle, metal bumper, temperature sensor and washer reservoir are removed for installation. Trimming is required. Drilling is required.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for auto manufacturer's tolerances. These minor adjustments may include filing a hole slightly, bending electrical rods or bending end plates.

The BX8869 Bulb and Socket Wiring Kit is recommended for this vehicle.



Possible location for the BX8869 Bulb and Socket Wiring Kit.

Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.

Installation Instructions:



1. Remove seven pushpins from the top of the radiator cover. Pull radiator cover forward to remove. Set radiator cover and pushpins aside to be reinstalled later.



 Just forward of front tire, inside the wheel well, remove two Phillips screws (see white arrows). Remove one pushpin on the corner of fascia, just above the upper Phillips screw (see grey arrow). Do this to both sides of the vehicle. Set screws and pushpins aside to be reinstalled later.





 On driver's side, remove one metric bolt from the lower edge of fascia, just forward of front tire, using the 10mm socket. Do this to both sides of vehicle. Set bolts aside to be reinstalled later.



4. Remove four pushpins from the bottom of fascia. Pull fascia corners to the side, then forward to remove. Set pushpins and fascia aside carefully to be reinstalled later.



5. On the driver's side, remove two metric bolts from the air baffle using the 10mm socket. Pull air baffle down and out to the side of vehicle to remove. Set bolts and air baffle aside to be reinstalled later.




 On passenger's side, on coolant line closest to washer reservoir, remove one metric bolt using the 10mm socket (see lower white arrow) and disconnect one clip from line (see upper white arrow). On the coolant line closest to frame, disconnect two clips (see grey arrows). The two upper clips will remain on vehicle and the two lower clips are to remain on coolant lines.

Page 4 of 10






7. Using the 10mm socket, remove one metric bolt from the coolant line bracket at the bottom of radiator. Set bolt aside to be reinstalled later.

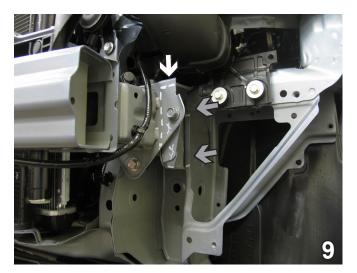

9. Using the reciprocation saw, cut through the webbing of the frame end – making a horizontal cut even with the top edge of frame rail end (see white arrow) starting from the outer edge of webbing and ending flush with the side of frame. Then make a vertical cut starting from the bottom of frame webbing, flush with the side of frame, up to the end of initial cut and remove this portion of webbing. Next make two horizontal cuts on the frame support webbing (see grey arrows) and flatten with the hammer. Do this to both sides of the vehicle.



8. On driver's side, remove the coolant line clip from the front of lower frame support just below metal bumper. Do not remove clip from coolant line. Pull the driver's side end of coolant line over to the passenger side of vehicle to clear area for baseplate installation.

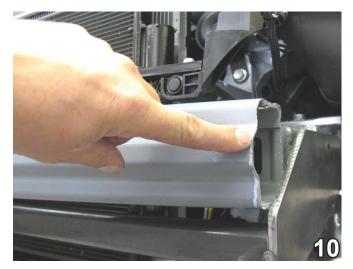

10. Using the reciprocating saw, cut the metal bumper to make it flush with the side of the frame rail, approximately 1/4" from the end of metal bumper. Do this to both sides of the vehicle. This clears the area for baseplate installation.





11. Using the 12mm socket, remove two metric bolts (one from the top and one from the bottom) of the metal bumper support. Do this to both sides of the vehicle. Remove the pins attaching the temperature sensor to the bottom of the bumper. Pull bumper forward to remove. Set bolts, bumper, pins and sensor aside to be reinstalled later.



12. On the passenger's side, disconnect and plug the washer reservoir. Remove two metric bolts from the front of reservoir using the 10mm socket. Set bolts aside to be reinstalled later.



13. **2007-09 Models:** Remove one metric bolt from the side of washer reservoir using the 10mm socket. Pull reservoir down and to the side to remove. Set bolts and reservoir aside to be reinstalled later.




13. **2010 Model:** Remove one metric bolt from the back side of washer reservoir using the 10mm socket. Pull reservoir down and to the side to remove. Set bolts and reservoir aside to be reinstalled later.





14. On side of frame rail, align baseplate to bottom of the flattened webbing and clamp in place with the vise grips. Using the baseplate as a template, drill four holes into the frame rail with the 13/32" drill bit. Insert two 3/8" nut plates through opening in frame rail end and align to top two holes. Install two 3/8-16 x 1 1/4" hex bolts and 3/8" lock washers to nut plates. Do not tighten. Install bumper. Now, tighten hex bolts. Do this to both sides of the vehicle.

BE SURE TO USE LOCTITE® RED ON ALL BOLTS BEFORE TIGHTENING. TIGHTEN ALL BOLTS ACCORDING TO THE TORQUE CHART ON THE FRONT PAGE OF THESE INSTRUCTIONS OR ON PAGE 3 OF THE BASEPLATE TOWING GENERAL INSTRUCTIONS.

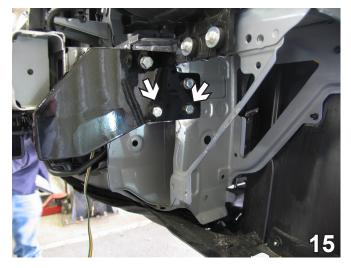


15. In lower drilled holes of baseplate, install two 3/8-16 x 1" hex bolts, 3/8" lock washers and 3/8-16 hex nuts and tighten. Do this to both sides of the vehicle.

When using power drills be aware of the dangers of torque and drill bit length.




 Relocate coolant line lower. Move bottom coolant line to just above original bolt hole for the bracket. Drill into the bracket using the 9/32" drill bit. Insert 10mm metric bolt into drilled hole and tighten.



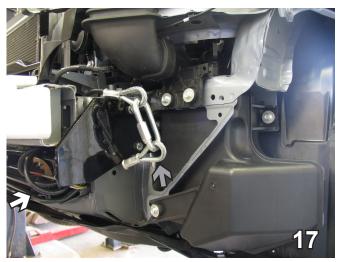


- 17. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate (see grey arrow). The photo above shows the recommended installation of the cables to frame of vehicle (see white arrow). Additional options may interfere with suggested mounting; in this case secure the cables to a solid piece of the frame as described in the instructions included with the permanent baseplate safety cables. Be sure the safety cables do not rub against any hoses or moving parts. Do this to both sides of the vehicle.
- 20. Attach the breakaway bracket to the underside of the metal bumper with a 1/4"-20 x 3/4" bolt and 1/4"-20 nut.

18. Reinstall washer reservoir, temperature sensor, air baffle, coolant line clips on passenger's, the coolant line clip on the driver's side and bolts.

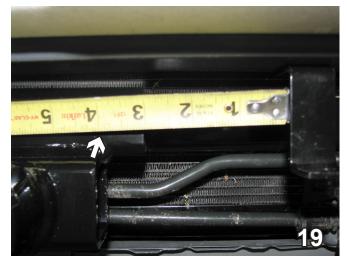

19. Measure 4" from the receiver tube to location position for the breakaway bracket. Drill a hole into the bottom of the metal bumper with 9/32" drill bit.

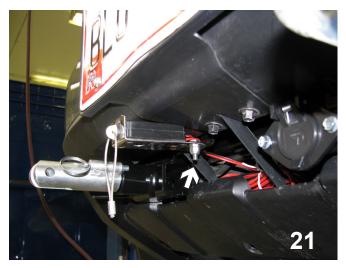

21. Attach the breakaway (not supplied) to the bracket with 1/4"-20 x 3/4" bolt and 1/4"-20 nut.





22. Align the fascia to its original position and, using the hack saw blade or utility knife, trim fascia contours to allow room for relocated coolant lines. Do this to both sides of the vehicle. Remove fascia.

Be sure that **ALL** electrical connections are plugged in properly and functioning **BEFORE** installing the fascia.

If the baseplate is in an accident, it must be replaced. DO NOT use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. DO NOT use the baseplate if it is damaged or missing parts.



- 23. **2010 Model:** Trim the two outside bars completely off so that the baseplate tabs can come through. Do this on both sides.
- 24. Reinstall the fascia.

DEALER or INSTALLER:

Be certain the user receives the instruction sheets for their products.

Install the tow bar and safety cables according to the instructions provided in their packages. When demonstrating this to the customer, be sure to include all the contents and packages.

Do **NOT** substitute other devices if the tow bar pins and clips are misplaced.





Shown without removable tabs installed.



(2007) - Shown with removable tabs installed.



(2010) - Shown with removable tabs installed.

CUSTOMER SERVICE COMMITMENT

Blue Ox is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer care team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.



(2011) - Shown with removable tabs installed.

© 2011 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 • Fax: (402) 385-3360 www.blueox.com



12/12/16

General Information

- Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite[®] Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/ recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

1. It is YOUR responsibility to watch for:

- Oil cooler and air conditioner lines
- Electrical wires and hoses
- Missing parts or attaching points on the frame


** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.

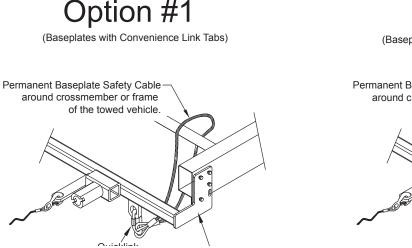

Option #2

(Baseplates with out Convenience Link Tabs)

