Please visit www.blueox.com for the latest version of these installation instructions.



BX2340 2017-18 Hyundai Elantra (No GT / GT Sport) Installation Instructions

Attachment Tab Height: 14 1/2"

Attachment Tab Width: 24"

Serial Number

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

- Blue Ox[®] towing products and accessories are intended to be installed by Blue Ox[®] Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox[®] Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
- Many Blue Ox[®] baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

Torque in Foot-Pounds for Inch Bolts				
Bolt Size	Grade 5	Grade 8		
1/4"	10	14		
5/16"	19	29		

Bolt Torque Specifications

5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230
3/4"	257	380

Bolt Torque Specifications Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6 - 6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318

A WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

Instruction Notes: The fascia and windshield washer fluid reservoir are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8848 4-Diode Wiring Kit is recommended for this vehicle.

NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite[®] Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. DO NOT use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. DO NOT use the baseplate if it is damaged or missing parts.

BX2340 2017-18 Hyundai Elantra (No GT / GT Sport) Installation Instructions

Tools Required Large Vise Grip Flat Screwdriver Utility Knife Reciprocating Sav Phillips Screwdrive Torque Wrench Drill Tape Measure Loctite® RED 3/8" Drill Bit 10MM Socket 12MM Socket 7/16" Socket 7/16" Socket		() () () () () () () () () () () () () (
Item No.	Part No.	6 PIN CONNECTOR	1 4.7
			<u>Qty.</u>
1	61-4978	3/8" Whiz Nut w/ 14" Wire	4
1 2	61-4978 61-5208	3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire	4 4
1 2 3	61-4978 61-5208 61-7800	3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate	4 4 1
1 2 3 4	61-4978 61-5208 61-7800 62-3469	3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole	4 4 1 2
1	61-4978 61-5208 61-7800 62-3469 201-0050	3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP	4 4 1 2 1
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192	3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw	4 4 1 2 1 2
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440	3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw #10-32 1/2" Hex Head Bolt, Grade 5, ZP	4 4 1 2 1 2 8
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655	3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 	4 4 1 2 1 2 1
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702	3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 6MM-1.0 X 30MM Hex Head Bolt, Grade 8.8, ZP 6MM-1.0 X 45MM Hex Head Bolt, Grade 8.8, ZP	4 4 2 1 2 1 8 1
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0440 201-0655 201-0702 201-0979	 3/8" Whiz Nut w/ 14" Wire	4 1 2 1 2 1 1 1 1
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0979 201-0979 202-0047	 3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 6MM-1.0 X 30MM Hex Head Bolt, Grade 8.8, ZP 6MM-1.0 X 45MM Hex Head Bolt, Grade 8.8, ZP #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 	4 1 2 1 2 1 2 1 1 2 2
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0702 201-0979 202-0047 202-0102	 3/8" Whiz Nut w/ 14" Wire	4 1 2 1 2 1 1 2 1 2 1
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0702 201-0979 202-0047 202-0102 203-0001	 3/8" Whiz Nut w/ 14" Wire	4 1 2 1 2 1 1 2 1 2 1 2
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0979 202-0047 202-0102 203-0001 203-0003	 3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 6MM-1.0 X 30MM Hex Head Bolt, Grade 8.8, ZP 6MM-1.0 X 45MM Hex Head Bolt, Grade 8.8, ZP 	4 1 2 1 2 1 1 2 1 2 1 2 1
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0702 202-0047 202-0102 203-0001 203-0008	 3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 6MM-1.0 X 30MM Hex Head Bolt, Grade 8.8, ZP 6MM-1.0 X 45MM Hex Head Bolt, Grade 8.8, ZP #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 1/4"-20 Hex Nylon Nut, ZP 1/4" Flat Washer, ZP 3/8" Flat Washer, ZP 1/4" Lock Washer, ZP 	4 4 1 2 1 1 1 2 1 2 1 2 1 2 1 2
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0702 201-0979 202-0047 202-0102 203-0001 203-0008 203-0010	 3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 6MM-1.0 X 30MM Hex Head Bolt, Grade 8.8, ZP 6MM-1.0 X 45MM Hex Head Bolt, Grade 8.8, ZP #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 1/4"-20 Hex Nylon Nut, ZP 3/8" Flat Washer, ZP 3/8" Lock Washer, ZP 	4 4 1 2 1 1 2 1 2 1 2 1 2 1 2 1 2
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0702 201-0979 202-0047 202-0102 203-0001 203-0008 203-0010 203-0054	 3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 6MM-1.0 X 30MM Hex Head Bolt, Grade 8.8, ZP 6MM-1.0 X 45MM Hex Head Bolt, Grade 8.8, ZP #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 1/4"-20 Hex Nylon Nut, ZP 1/4" Flat Washer, ZP 3/8" Flat Washer, ZP 3/8" Lock Washer, ZP #10 Lock Washer, ZP 	4 1 2 1
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0702 201-0979 202-0047 202-0102 203-0001 203-0003 203-0008 203-0054 203-0054 299-0685	 3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 6MM-1.0 X 30MM Hex Head Bolt, Grade 8, ZP 6MM-1.0 X 45MM Hex Head Bolt, Grade 8.8, ZP #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 1/4"-20 Hex Nylon Nut, ZP 1/4" Flat Washer, ZP 3/8" Flat Washer, ZP 3/8" Lock Washer, ZP #10 Lock Washer, ZP 4-Way Bracket 	4 4 1 2 1 1 2 1
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0702 201-0979 202-0047 202-0102 203-0001 203-0008 203-0008 203-0054 299-0685 226-0046(not shown)	 3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 6MM-1.0 X 30MM Hex Head Bolt, Grade 8.8, ZP 6MM-1.0 X 45MM Hex Head Bolt, Grade 8.8, ZP #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 1/4"-20 Hex Nylon Nut, ZP 1/4" Flat Washer, ZP 3/8" Flat Washer, ZP 3/8" Lock Washer, ZP #10 Lock Washer, ZP 4-Way Bracket Class III Safety Cables 	4 4 1 2 1
1	61-4978 61-5208 61-7800 62-3469 201-0050 201-0192 201-0440 201-0655 201-0702 201-0702 201-0979 202-0047 202-0102 203-0001 203-0003 203-0008 203-0008 203-0054 299-0685 226-0046(not shown) 229-0359(not shown)	 3/8" Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX2340 Baseplate Attachment Tab Assembly with Hole 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP 6MM-1.0 X 30MM Hex Head Bolt, Grade 8, ZP 6MM-1.0 X 45MM Hex Head Bolt, Grade 8.8, ZP #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 1/4"-20 Hex Nylon Nut, ZP 1/4" Flat Washer, ZP 3/8" Flat Washer, ZP 3/8" Lock Washer, ZP #10 Lock Washer, ZP 4-Way Bracket 	4 1 2 1

Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/ or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.



 Remove the four (4) push pins from the top of the fascia cover (white). Using a 10MM socket, remove the two (2) bolts from the fascia cover (gray).




 Using a 10MM socket, remove the two (2) bolts from above the headlights (white). Using a 12MM socket, remove the one (1) upper bolt (gray). Do this for both sides of the vehicle.





3. Underneath the vehicle, remove ten (10) push pins. There are two (2) towards the front, and four (4) on both sides.

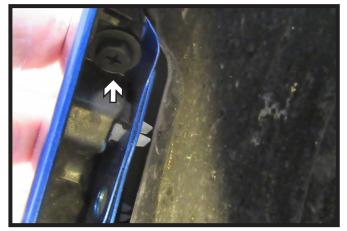

 Using a 10MM socket, remove the one (1) bolt from the upper part of the wheel well. Do this for both sides of the vehicle.




5. Pull the corners of the fascia away from the vehicle disconnecting any electrical connections and set the fascia aside.




6. Using a 10MM socket, remove the one (1) bolt that secures the horn in place. Do this for both sides of the vehicle.




7. Using a 10MM socket, remove the four (4) bolts at the front of the belly pan. There are two (2) on each side of the vehicle (left). Next, remove the two (2) bolts (center white) and the one (1) push pin (center gray) from the back-passenger side of the belly pan. Then, remove the one (1) bolt (right white) and the one (1) push pin (right gray) from the back-driver side of the belly pan. Remove the belly pan and set aside.

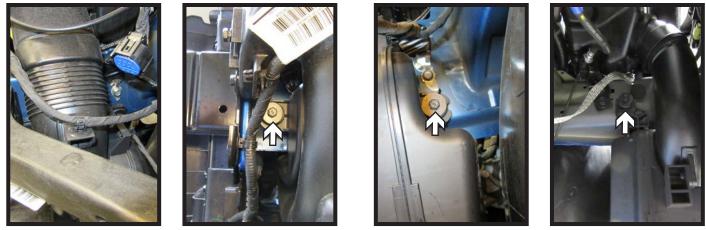


8. Remove the wire looms secured to the air baffle on the driver's side. Using a 10MM socket, remove three (3) bolts holding the baffle in place. There is one (1) on both sides of the baffle, with one (1) behind the baffle.

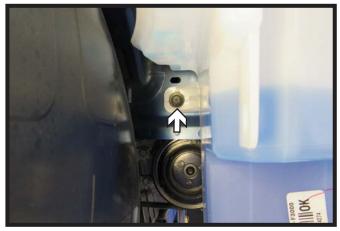

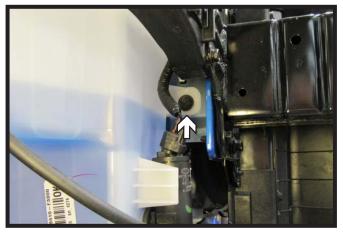

9. Using a 10MM socket, remove the two (2) bolts securing the windshield wiper fluid reservoir. Disconnect and plug all lines, and set the reservoir aside.

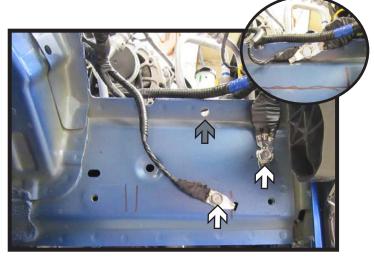

 Using a 10MM socket, remove the two

 (2) bolts on the passenger's side bumper horn (white). Using a 1/4" drill bit, bore the upper existing hole out (gray). Bolt the connections in this hole, as pictured above.



Using a 10MM socket, remove the two

 (2) bolts on the driver's side bumper horn
 (white). Using a 1/4" drill bit, bore the
 upper existing two (2) holes out (gray).
 Bolt the connections into these holes, as
 pictured above.







12. Using a reciprocating saw, trim the marked areas on both sides of the plastic shielding on the bumper.




13. On each side of the frame right above the baseplate drill an 1-1/4" hole using a hole saw to use as an the access hole for the nut plates with 14" wire.

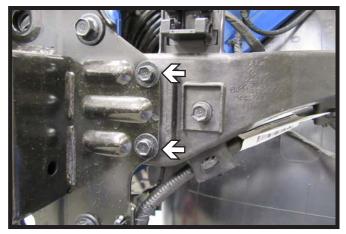

14. Using a 10MM socket, remove the two (2) bolts from the bumper horn, and set the back piece aside. Do this for both sides of the vehicle.

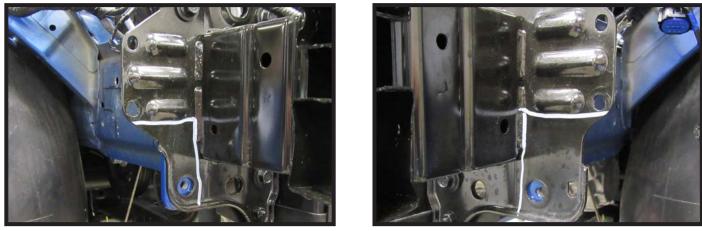

15. Using a reciprocating saw, trim the marked areas on both sides of the bumper horn.

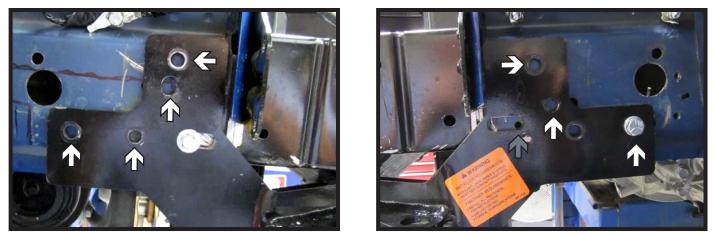


16. Install the baseplate to the frame, aligning the existing holes in the frame to the baseplate. Level and clamp in place. (It is recommended to use the existing bolts to pin the baseplate in place while leveling and clamping, then remove after baseplate bolts are installed)

Using a 3/8" drill bit, drill the four (4) holes in the baseplate through the frame and install the 3/8" hardware (white). Do this on both sides of the vehicle. On the driver side, use the existing hole (gray). Fully tighten all hardware.

** Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque.



17. When reinstalling the air baffle, use the supplied 3/8" hardware to secure it through the baseplate hole.

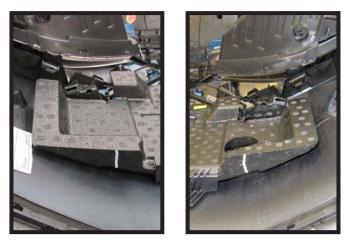

18. Using a reciprocating saw, trim the marked areas on both sides of the fascia.



19. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the instructions included with the permanent baseplate safety cables. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.



20. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the windshield wiper fluid reservoir, horns, fascia and fascia cover.

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2016 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 Fax: (402) 385-3360 www.blueox.com

General Information

- Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite[®] Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/ recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

- 1. It is YOUR responsibility to watch for:
 - Oil cooler and air conditioner lines
 - Electrical wires and hoses
 - Missing parts or attaching points on the frame


** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.

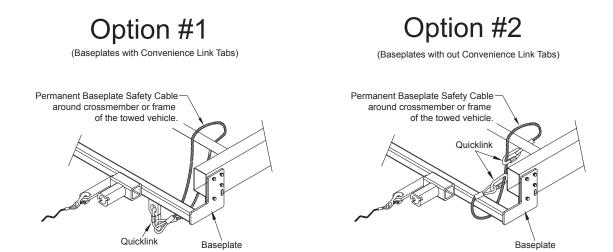

BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit <u>http://blueox.com/warranty/</u> to register your warranty

