



- SUPER HITCH - SUPER TRUSS EXTENSION

IMPORTANT OWNER-OPERATOR INSTALLATION INSTRUCTIONS

C1201/SH88CH

APPLICATION FITS

88-98 CHEVY 2500 LONG BED

91-00 CHEVY 3500 LONG BED

**PLEASE GIVE THIS BOOKLET TO YOUR CUSTOMER
AS IT CONTAINS CRITICAL OPERATOR INFORMATION**

**REV HHB 6-26-06
TECH SUPPORT (800) 246-8132**



C1201 PARTS INVENTORY

2	- Frame Side Plates	18	- 1/2" Lock Washers
1	- Double Receiver Crosstube	8	- 1/2" X 2" Grd. 8 Bolts
8	- 1/2" x 1 1/2" Rib-Neck Bolts	16	- 1/2" Grd. 8 Nuts
4	- 1/2" Flat Washers	2	- 5/8" Pin & Clip
16	- 1" x 2" Plate Washers	1	- 3/8" X 1" Gd. 5 Hex Bolt
2	- 12mm x 1.75 x 50mm Gd. 8 Hex Bolts (replaces factory bolts)	1	- 3/8" Lock Washer
1	- Plug Bracket	1	- 3/8" Nut

******NOTE: SEE PAGE 5 FOR PROPER PLATE PLACEMENT DIAGRAM**

WARNING: DO NOT LUBRICATE THREADS, BOLT FAILURE MAY OCCUR DUE TO OVER TIGHTENING. DO NOT DRILL ON THIS HITCH.

NOTE: THIS PRODUCT IS NOT RECOMMENDED FOR USE ON A 1/2 TON VEHICLE.

1. Remove factory hitch if necessary and loosen spare tire.
2. Find the two factory bolts in the bottom of the frame and remove. These bolts will be replaced with supplied metric bolts.
- 3A. **Installation: 1 person (see photos A, B, & C on page 3)**
Attach SuperHitch frame side plates to the truck frame as noted in steps 4 & 5 below (**see pg 6 for correct fastener assembly**). Attach to either side (leave bolts finger tight) and fasten with a plate washer, lock washer and nut. Now install double receiver cross tube using 1/2" x 1 1/2" rib neck stud bolts with the threads in towards the spare tire. When installing the rib neck stud bolts use a mallet or hammer and block of wood to seat the bolt heads against the frame side plates. Do not! use power tools or hand tools to "draw" the rib neck stud bolts through the holes. To simplify seating the stud bolts, use vise grips to clamp the SuperHitch crosstube to the side frame plate and snug the bolts in the trucks frame. This will minimize movement and ease this process. The rib neck bolts will be tightened to 75 ft. lbs.
- 3B. **Installation: 2 persons (see photos D & E on page 3)**
To simplify installation when the SuperHitch receiver is being installed by more than one pre-assemble the frame side plates and double receiver cross tube. When installing the 1/2" x 1 1/2" rib neck stud bolts used to attach the frame side plates to the double receiver cross tube the thread of these bolts should be in towards the spare tire. When installing the rib-neck stud bolts, use a mallet or a hammer and a block of wood to seat the bolt head against the frame side plates. Do not! use power or hand tools to "draw" the rib neck stud bolts through the hole. The rib neck bolts will need to be tightened to 75 ft. lbs.
4. Hold or jack the hitch into position if you decide to go with step 3B and install the supplied 12mm. x 1.75 x 50 mm bolts with 2 flat washers and 1 lock washer per bolt into the factory nut plate (**See photos on page 4**). Tighten 95 ft. lbs.
5. Check to see what holes line up and install one 1/2" x 2" Gd. 8 Hex Bolt and 1" x 2" plate washer on top of truck frame in each hole. All bolts except for the first hex bolt are installed thread down. In other words, the head of the bolt is towards the bed. Some of these holes may need to be drilled. A minimum of 5 bolts per side is required (**See top photo on pg 6**).
6. Next, install a 1" x 2" plate washer, 1 lock washer, and one 1/2" nut onto each of these bolts.
7. Retighten spare tire and install SuperTruss extension See SuperTruss extension instructions and picture on page 4.
8. Torque all 1/2" grade 8 nuts to 100 ft. lbs.
9. Some vehicles may require tailpipe modification.

IMPORTANT NOTE: USE ONLY SUPPLIED OR APPROVED BOLTS, LOCK WASHERS AND NUTS TO INSTALL THIS HITCH. This trailer hitch must use all fasteners as shown and be installed per these specifications or your warranty is void.

INSTALLATION DIAGRAMS

PHOTO A



PHOTO B



PHOTO C



**PHOTOS SHOW SUPERHITCH
INSTALLATION ON A 1997
FORD AND ARE USED HERE
FOR DEMONSTRATION
PURPOSES ONLY!**

PHOTO D

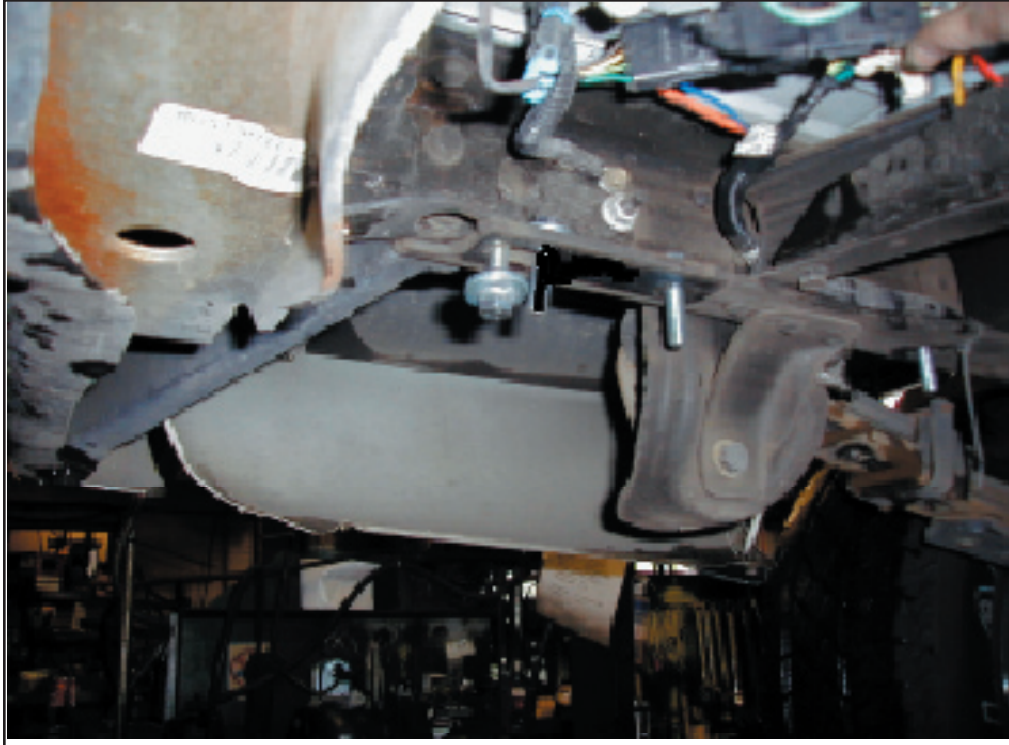


PHOTO E



INSTALLATION DIAGRAMS

SUPPLIED 12MM X 1.75 X 50 MM BOLT




NOTE!! 5 BOLTS ARE REQUIRED PER SIDE OR WARRANTY IS VOID



REMAINING BOLTS READY TO INSTALL

INSTALLATION DIAGRAMS

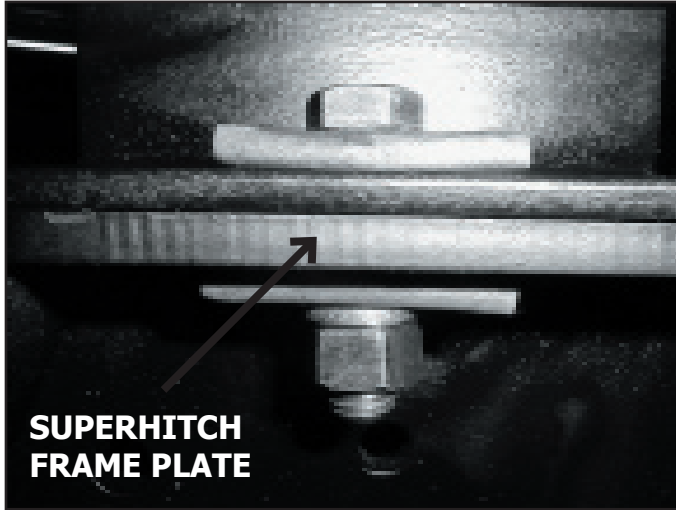


**SUPERHITCH
FRAME PLATE**

**GRADE 8 BOLTS
USE TWO 1" X 2"
PLATE WASHERS**



**GRADE 8 BOLT
SIX LINES ON TOP
USUALLY GOLD IN COLOR**

**NOTE THE
DIRECTION
OF THE
SUPERHITCH
SIDE PLATES
BEFORE
ASSEMBLY**

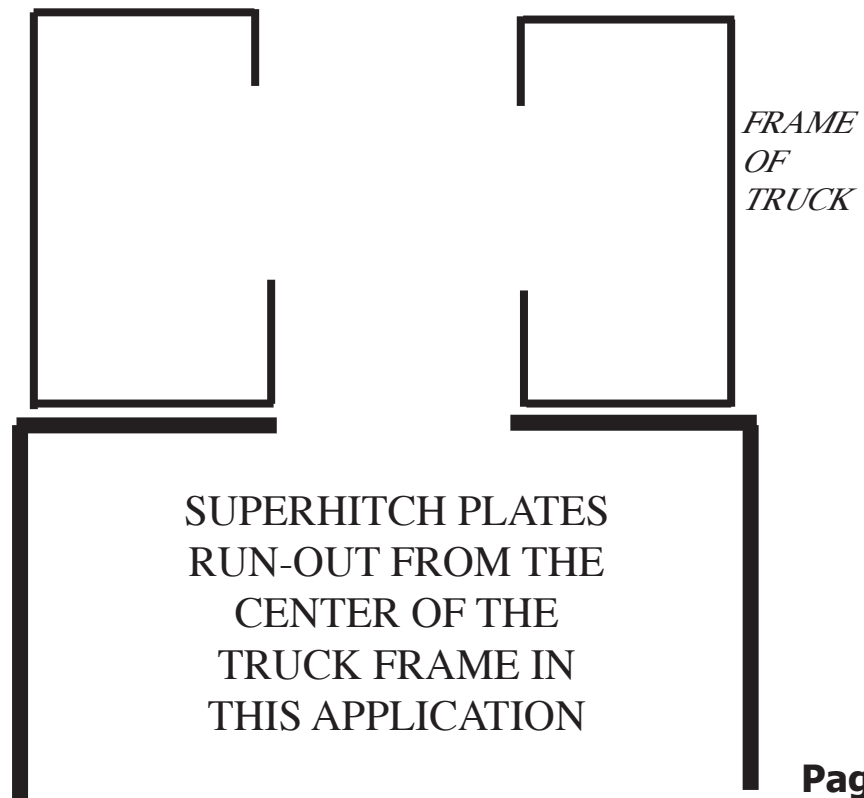

*FRAME
OF
TRUCK*

**SUPERHITCH PLATES
RUN-OUT FROM THE
CENTER OF THE
TRUCK FRAME IN
THIS APPLICATION**

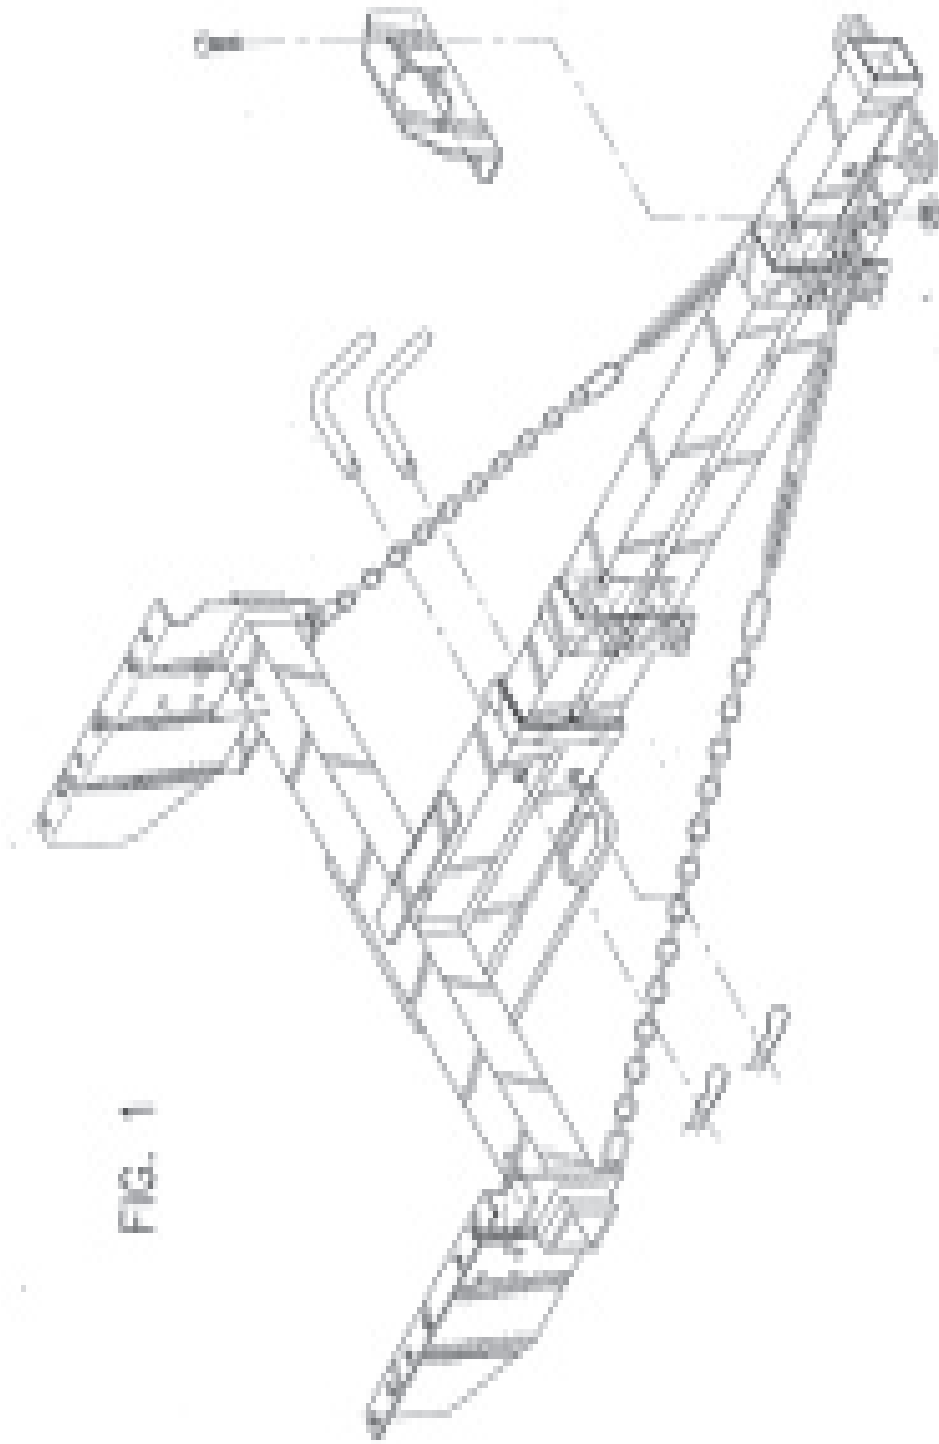


FIG. 1


SUPERHITCH DIAGRAM

SUPERTRUSS EXTENSION

WEIGHT CAPACITIES

(SUPERTRUSS SOLD SEPARATELY)

ASSEMBLE THE CHAIN, BOW SHACKLES, & TURNBUCKLES
AS SHOWN. TIGHTEN BOW SHACKLES AND
TURNBUCKLE JAM NUTS WITH HAND TOOLS
(**TIGHTEN TURNBUCKLES BY HAND**
DO NOT USE TOOLS TO TENSION TURNBUCKLES)

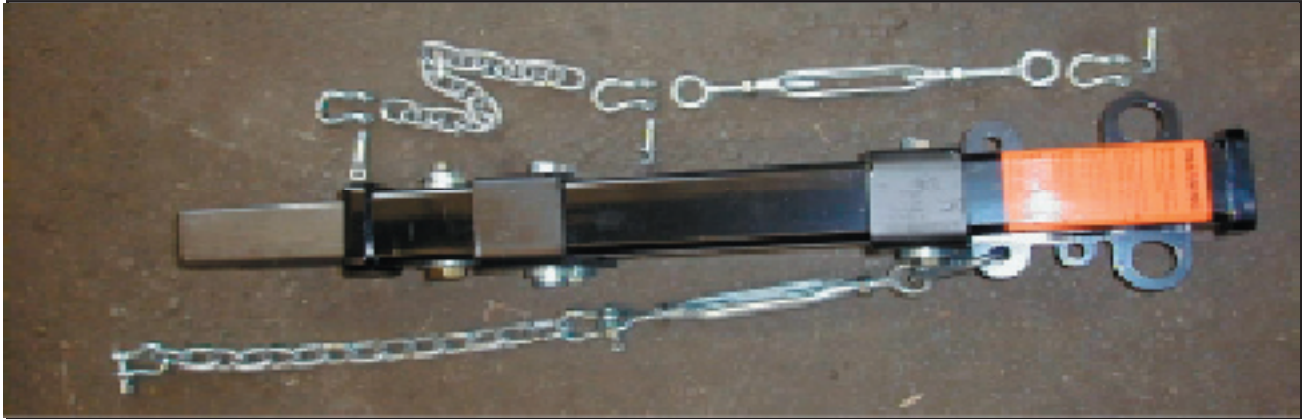


WARNING - READ CAREFULLY

<u>Dead Weight (weight carrying)</u>		<u>Weight Distributing (load equalizing)</u>	
<u>Tongue Weight</u>	<u>Pull Weight</u>	<u>Tongue Weight</u>	<u>Pull Weight</u>
48"	600 lb.	6,000 lb.	1,200 lb.
42"	600 lb.	6,000 lb.	1,200 lb.
36"	650 lb.	6,500 lb.	1,200 lb.
32"	650 lb.	6,500 lb.	1,200 lb.
28"	750 lb.	7,500 lb.	1,200 lb.
24"	750 lb.	7,500 lb.	1,400 lb.
21"	750 lb.	7,500 lb.	1,400 lb.

THE USE OF THIS PRODUCT WITHOUT A LOAD EQUALIZING SYSTEM LIMITS YOUR CAPACITY TO THE DEAD WEIGHT (WEIGHT CARRYING) CAPACITY. FAILURE TO STAY WITHIN THESE LIMITATIONS WILL RESULT IN DAMAGE AND VOID YOUR WARRANTY!!!!

The Torklift SuperTruss Extension cannot be used with any other type of trailer hitch receiver. Any attempt to modify or recreate a SuperHitch receiver will result in a loss of warranty. The modification of another factory or aftermarket trailer hitch receiver in an attempt to use a Torklift SuperTruss extension can result in death or damage. The SuperHitch receiver made by Torklift is a special extra heavy-duty trailer hitch receiver, and the capacities stated for the SuperTruss extension are solely with the use of a Torklift Superhitch. Please call if you have any questions on installs or otherwise at 1-800-246-8132.

**THESE STEPS MAY VARY DEPENDING
ON WEIGHT DISTRIBUTION HITCH
MANUFACTURER
WEIGHT DISTRIBUTING
(LOAD EQUALIZING HITCH)**

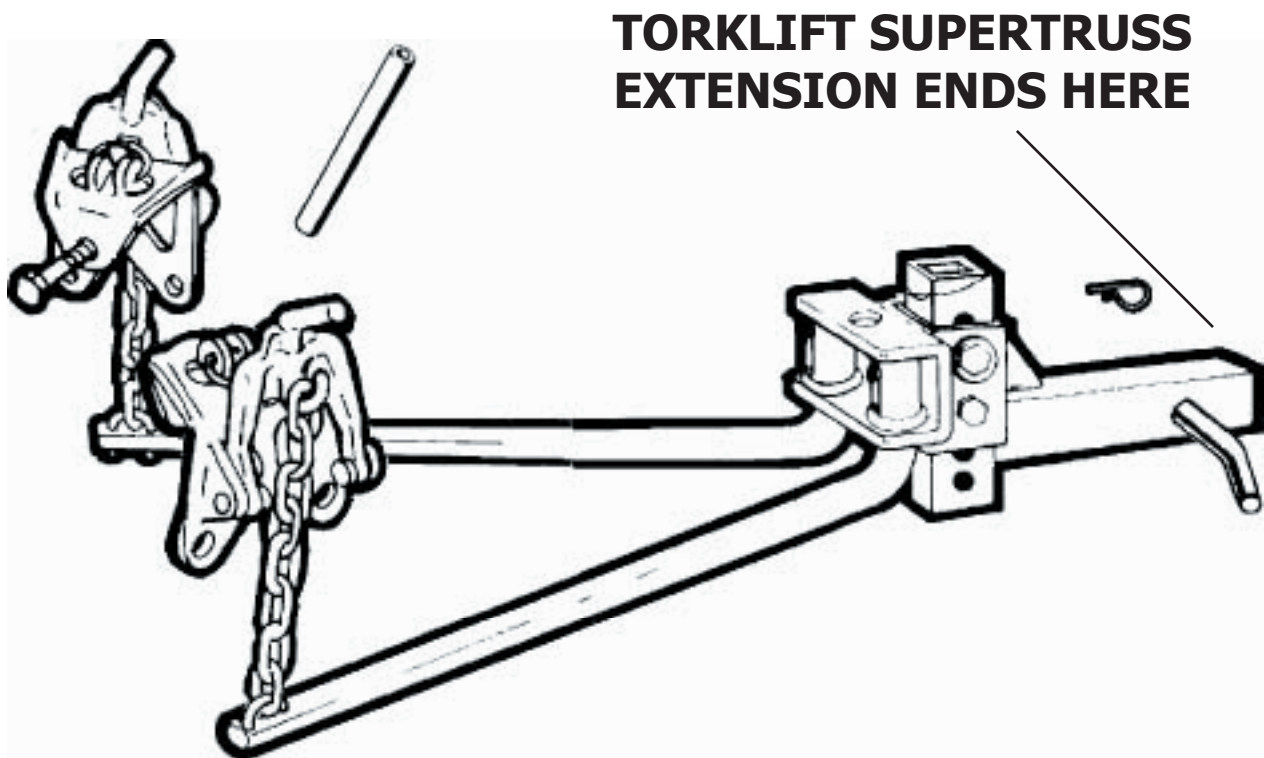

**THIS TYPE OF HITCH IS REQUIRED IN
ADDITION TO YOUR SUPERHITCH TO
OBTAIN THE MAXIMUM RATED CAPACITY.
INCORRECT INSTALLATION OF THE WEIGHT
DISTRIBUTION SYSTEM MAY RESULT IN
DAMAGE TO YOUR VEHICLE.**

WEIGHT DISTRIBUTION - CONTINUED

When towing trailers that exceed the dead weight rating on your extension it is mandatory to use a weight distributing type hitch/ball mount and related hardware (SPRINGBARS, QUICK HOOKUP CLIPS, ETC).


Not all weight distribution systems are rated at the same capacity. Your weight distributing ball mount and bars must be rated at least 100 lbs higher in regards to tongue weight than your pre-existing tongue weight of your trailer **when fully loaded.**

It is of critical importance that your weight distribution system is not only rated high enough to match your existing tongue weight, but that you also have the system set up correctly.

We have supplied a formula to assist you in accurately determining the tongue weight load of your trailer when fully loaded. After accurately determining your tongue weight and making sure that your weight distribution system is rated high enough, your next step is to ensure the set up of the system is correct.

PLEASE READ CAREFULLY

1. The height of the ball must be determined before any assembly work can be started. To get ball height, measure trailer from ground level to top of ball coupler. Be sure trailer is parallel to ground. With your camper on your truck, fully loaded with gear and overloads adjusted, slide the weight distribution ball mount into the SuperHitch extension. Be sure the truck is on level ground. The measurement from ground to top of ball should be 1 1/2" higher than the level height of trailer top of ball measurement.

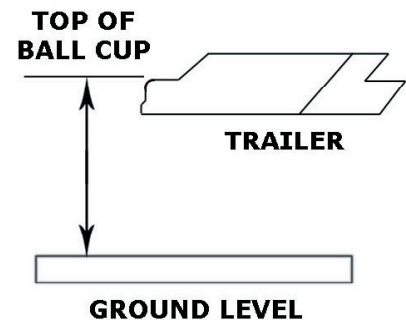




2. After ball height has been determined write down the ascertained height. EXAMPLE: Measured top of coupler height was 17" from ground, ball height should be 18 1/2".



3. Slide the shank into the sleeve receiver, insert hitch pin and spring clip. With the ball attached to the ball mount, slide the ball mount up or down the shank until nearest dimension is obtained and the holes line up with shank. Insert the bolt in the bottom hole first (rest hitch head).


4. The rivet and 8 spacer washers are supplied in order to gain the correct downward angle of the spring bars. Insert rivet, and depending on the angle or the slope of bars that must be gained, use either 8 or the least amount of washers necessary in order to establish correct angle. The rivet and its accompanying washers are placed in the 1/2" hole between the "U" on the ball mount to acquire desired angle of spring bar. Once the spring bar angle has been determined, insert the top bolt with a flat washer, both sides, the lockwasher, and nut to secure the unit in correct position, now insert the bottom bolt, use the lock washer and nut. Before tightening the bolts, lock the set screw. (After the first day of towing, check set the screw for tightness.

See the following page for further illustrated diagrams

ILLUSTRATED DIAGRAMS
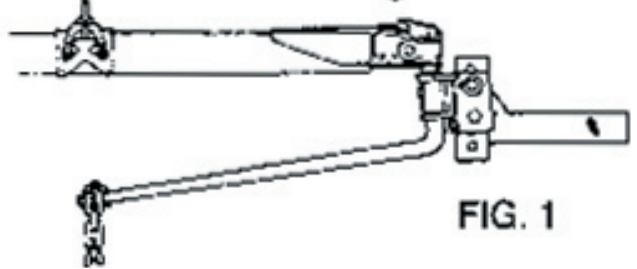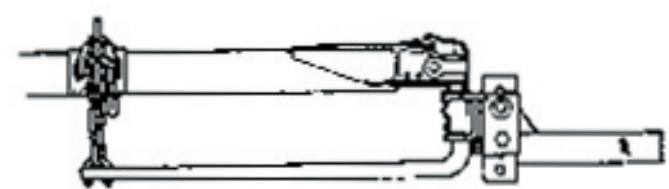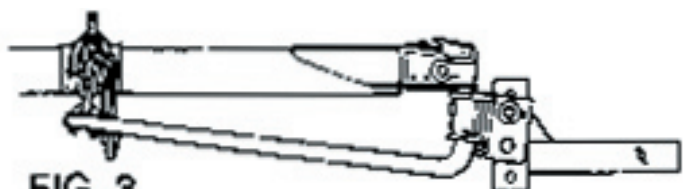
<p>BEFORE HOOKING UP Spring bar should hang down on a 10-13 degree angle when ball mount has been tilted back at 6-8 degree angle.</p>	 <p>FIG. 1</p>
 <p>FIG. 2</p>	<p>AFTER HOOKING UP Spring bar should be parallel with trailer frame, or a slight angle up or down. Slight bow or bend to bar is nor-</p>
<p>WRONG Readjust degree of tilt on ball mount, if you have more than 5 links of chain hanging free. The number of links should be the same on both bars.</p>	 <p>FIG. 3</p>

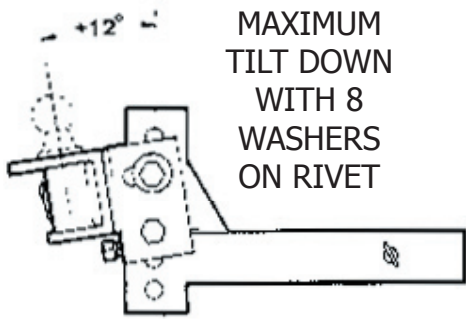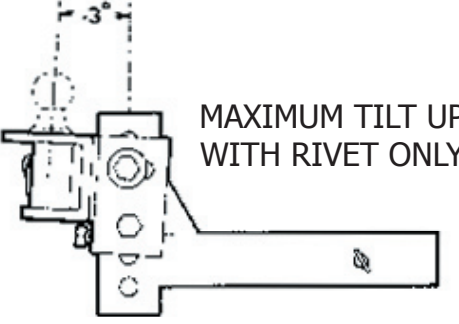
<p>EACH WASHER LOWERS CHAIN END OF SPRING BAR APPROX. 1-1/2"</p>	 <p>+12°</p> <p>MAXIMUM TILT DOWN WITH 8 WASHERS ON RIVET</p>	 <p>-3°</p> <p>MAXIMUM TILT UP WITH RIVET ONLY</p>
--	--	--
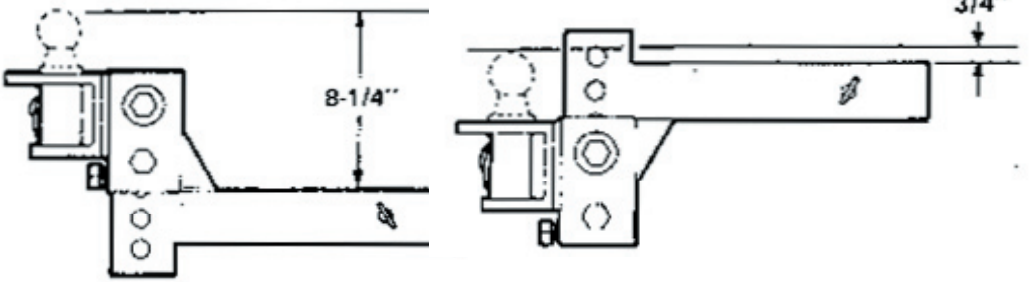
<p>BOLT-TOGETHER BALL MOUNT HAS 7-1/2" ADJUSTMENT, EACH ADJUSTMENT IS 1-1/4" EXTRA HY-LOW SHANKS AVAILABE IF NEEDED</p>	 <p>8-1/4"</p> <p>3/4"</p>
---	--

THESE STEPS MAY VARY DEPENDING ON WEIGHT DISTRIBUTION HITCH MANUFACTURER

1. Put the ball mount into the sleeve and insert the 5/8" hitch pin using spring clip to lock the pin into place, hitch balls are not furnished with the hitch as there are several sizes. Normally they are supplied or may be purchased from the dealer to match the coupler of the trailer. Ball shank bushings are supplied to reduce the size of the ball hole in the hitch down to 1" if needed.


2. Measure the towing vehicle ball height before adding load to towing vehicle. Hook the trailer to the truck. Lock on the ball. To make hooking up easier and safer - raise front of the trailer and back of the towing vehicle above level with the trailer tongue jack. This removes some of the tension by reducing the distance between the spring bar and hook-up arm.

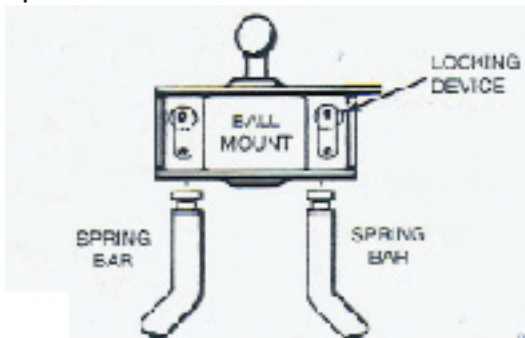

3. This step may vary depending on the manufacturer. The spring bars can be inserted into either side of the ball mount. (There is no 'right' or 'left' bar). To insert and lock spring bar in socket, hold the bar under socket and push up. The spring bar will automatically be locked into position by the spring bar locking device. (Check to make sure the bar is locked in by moving it up and down at the chain end.) To remove the spring bars, just pull out the locking device or swing the bar around under the bumper and it will drop free.

4. To find correct location on trailer frame for quick hook-up bracket, hold the chain straight up and down and free of twist center hook-up bracket on frame and tighten. Set the screw 1/4 turn only. **DO NOT OVERTIGHTEN.** On straight tongue trailers a poli-tongue adapter is necessary

5. You are now ready to put tension on the spring bars. When using the quick hook-up, lower the arm and slip link of chain over hook. Insert hook-up handle over the end of the quick hook-up arm. Lift and flip over center. (See fig A).

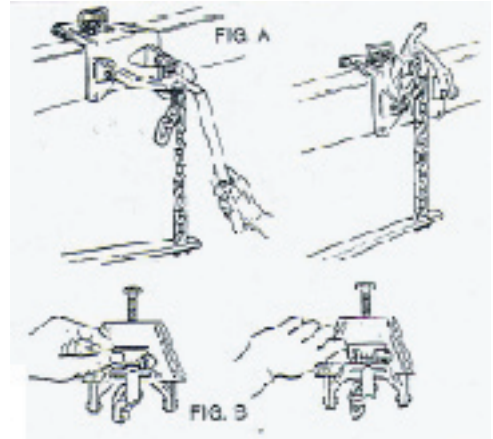

CAUTION: MAKE SURE THAT THE HOOK-UP ARM IS COMPLETELY SEATED AND THAT THE SPRING BAR IS PUSHED DIRECTLY UNDER THE HOOK-UP CHAIN HOOK. Now install the hook-up locking clip through locking ears and over hook on hook-up arm. (See fig B)

6. Release the trailer tongue jack by adjusting the chain links up or down, the desired load on the bars will be gained. Now lock the coupler on to the ball and raise the front of the trailer approximately 3" above level. Now attach the chain link to the hook-up clip. It should require 50-100 lbs. of force to properly tension the spring bars. Bow or bend to the spring bar is normal.


7. To release tension on the spring bars, raise the front of the trailer and the back of the towing vehicle above level (approx. 3") with the trailer tongue jack. Remove the locking clip from the bracket. Insert the handle over arm. Carefully lower the arm with the handle. It will require effort to bring the arm over the center and then to resist the chain tension as the arm rotates downward.

MAINTENANCE:


Use heavy lubrication such as fibre type wheel bearing grease on the hitch ball and on spring bars inside the ball mount. This is Recommended every day. Also keep the hitch painted to prevent rust and check the tightness of bolts regularly. Clean out old grease and do not let it harden inside of the ball mount

IMPORTANT CONSUMER INFORMATION ON TOWING

TOWING EQUIPMENT OWNERS: Make sure all of the operators of your equipment read and understand this information before towing. Save for reference. This will help you properly select, use, and maintain your towing equipment. Refer to your owner's manuals for your tow vehicle, trailer, and other parts of your towing system. Learn the capabilities and limitations of each part. The **GROSS TRAILER WEIGHT** and **TONGUE WEIGHT** are two of the most important items to consider. **THESE WEIGHTS MUST NEVER EXCEED THE LOWEST RATING OF ANY PART OF YOUR TOWING SYSTEM.** **GROSS TRAILER WEIGHT** is the weight of the trailer plus all cargo. Measure the **GROSS TRAILER WEIGHT** with the fully loaded trailer on a level surface. The weight is the downward force exerted on the ball by the trailer coupler. Measure the **TONGUE WEIGHT** with the fully loaded trailer on a level surface. The coupler must be at its normal towing height. Use a commercial scale or a bathroom scale. Set up the bathroom scale as shown for heavy tongue weights.

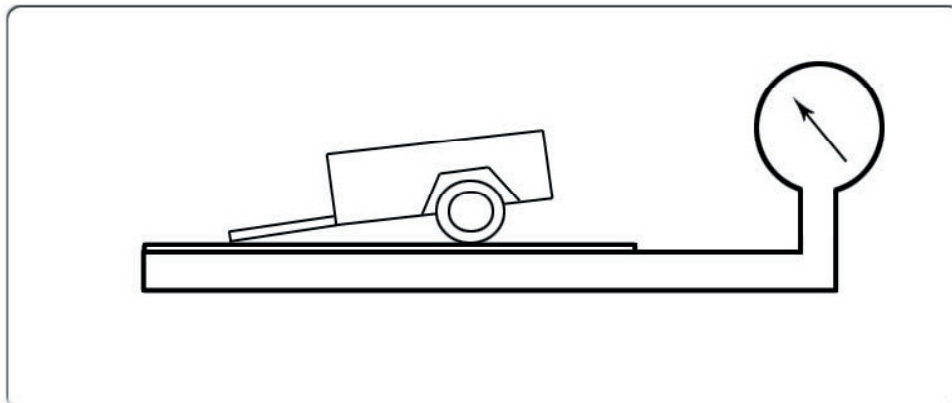

Method for Measuring Gross Trailer Weight

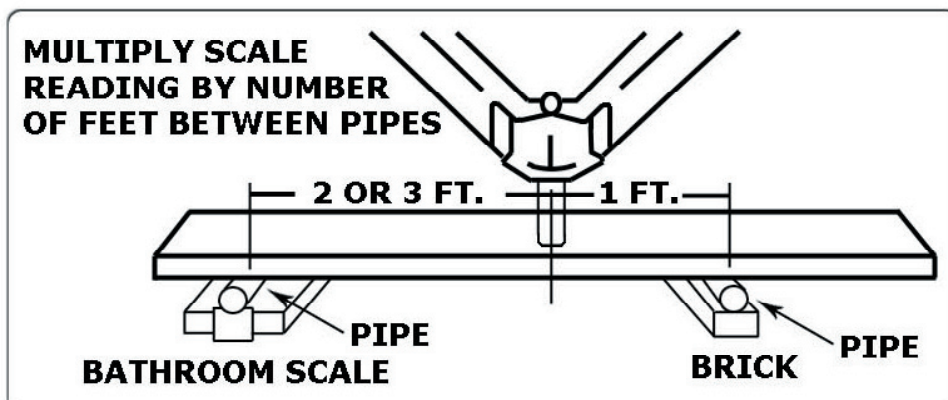

Method for Measuring Trailer Tongue Weight

YOUR TOWING EQUIPMENT

HITCH BALLS

Select by gross trailer weight rating, mounting platform thickness, hole size and coupler socket size. Platform must be at least 3/8 inch thick. Hole must not exceed threaded shank diameter by more than 1/16 inch. Use lock washer. Tighten per instructions. When tightened, shank must protrude beyond bottom of nut. Gross trailer weight rating and ball diameter are marked on REESE balls.

TRAILER COUPLERS

The coupler socket should be smooth, clean and lightly lubricated. Tighten or adjust per coupler manufacturer's instructions.

SAFETY CHAINS

Connect safety chains properly EVERY TIME YOU TOW. Cross chains under coupler. Attach securely to the hitch or tow vehicle so they can't bounce loose. Leave only enough slack to permit full turning. Too much slack may prevent chains from maintaining control if other connections separate. Don't let chains drag on the road.

TRAILER LIGHTS, TURN SIGNALS, ELECTRIC BRAKES AND BREAK AWAY SWITCH CONNECTIONS

Make these safety-critical connections EVERY TIME YOU TOW, no matter how short the trip. Check operation, including electric brake manual control, before getting on the road.

SWAY CONTROLS

Sway controls can lessen the effects of sudden maneuvers, wind gusts and buffeting caused by other vehicles. We recommend them for trailers with large surface areas, such as travel trailers. Adjustable friction models can help control trailers with low tongue weight percentage.

OTHER USEFUL EQUIPMENT

AIR SPRINGS, AIR SHOCKS or HELPER SPRINGS are useful for some hitch applications. A TRANSMISSION COOLER may be necessary for heavy towing. Many states require TOWING MIRRORS on both sides.

TIRE INFLATION

Check often. Follow tow vehicle and trailer manufacturer's recommendations. Improper tire inflation can cause trailer sway.

NO PASSENGERS IN TRAILERS: NEVER allow people in trailers while towing under any circumstances.

HELPFUL TOWING HINTS

TRAILER LOADING

Proper loading helps prevent sway. Place heavy object on the floor ahead of the axle. Balance the load side-to-side. Secure it to prevent shifting. Tongue weight should be 10-15 percent of gross weight for most trailers. Too low a percentage of tongue weight can cause sway. NEVER load the trailer rear heavy. LOAD THE TRAILER HEAVIER IN FRONT

DRIVING

The additional weight of a trailer affects acceleration, braking, and handling. Allow extra time for passing, stopping, and changing lanes. Severe bumps can damage your towing vehicle, hitch, and trailer. Drive slowly on rough roads. STOP AND MAKE A THOROUGH INSPECTION IF ANY PART OF YOUR TOWING SYSTEM STRIKES THE ROAD. CORRECT ANY PROBLEMS BEFORE RESUMING TRAVEL.

CHECK FOR EXCESSIVE SWAY AND ELIMINATE IT

Excessive sway can lead to loss of control. Sway motion should settle out quickly. Sway tends to increase on a downgrade. Starting slowly, increase speed in gradual steps. If sway occurs, adjust your trailer load and equipment. Repeat until the trailer is stable at highway speed. Do this whenever your trailer loading changes.

IF TRAILER SUDDENLY STARTS TO SWAY

Turbulence from another vehicle, a wind gust, or a downgrade can cause sudden sway. So can a shift of the trailer's load or a trailer tire blowout. IF THE TRAILER SWAYS, IT IS THE DRIVER'S RESPONSIBILITY TO ASSESS THE SITUATION AND TAKE APPROPRIATE ACTION. Below are suggestions that may apply, depending on conditions:

DO

- Reduce your speed gradually
- Hold the steering wheel as steady as possible
- If your trailer has electric brakes, apply the brakes alone, without using the tow vehicle's brakes.

DON'T

- Don't hit your brake pedal hard unless absolutely necessary. A "jack-knife" can result.
- Don't try to steer out of the sway condition. Sudden or violent steering can make it worse.
- Don't speed up. Sway increases as you go faster.
- Don't continue towing a trailer that tends to sway. You may lose control during an emergency maneuver or if the conditions listed above occur.

TORKLIFT LIMITED WARRANTY

322 N RAILROAD AVE KENT, WA 98032 (800) 246-8132

LIMITED WARRANTY

TorkLift warrants its hitches, custom hitch receivers, frame mounted tiedowns and FastGun Turnbuckles from date of purchase against defects in material and workmanship under normal use and service, ordinary wear and tear excepted, for the ownership life of the original consumer purchaser. TorkLift will replace FREE OF CHARGE any part that proves defective in material or workmanship when presented to TorkLift, TRANSPORTATION CHARGES PREPAID, at the address above.

THIS WARRANTY IS LIMITED TO DEFECTIVE PARTS REPLACEMENT ONLY. LABOR CHARGES AND/OR DAMAGE INCURRED IN INSTALLATION OR REPLACEMENT AS WELL AS INCIDENTAL AND CONSEQUENTIAL DAMAGES CONNECTED THEREWITH ARE EXCLUDED. This warranty does not include the finish or paint on our products. Rusting, cracking or peeling of the finish is also excluded. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Any damage to the hitch, custom hitch receiver or frame mounted tiedowns as a result of misuse, abuse, neglect, accident, improper installation or any use violative of instructions furnished by us WILL VOID THE WARRANTY. This warranty gives you specific legal rights, and you may also have rights which vary from state to state. With warranty service or performance, you may be able to go to a small claims court, a state court or a federal district court.



**322 NO. RAILROAD PHONE (800) 246-8132
KENT, WA 98032 FAX (253) 854-8003**

OR VISIT OUR WEBSITE: WWW.TORKLIFT.COM

Dear Valued Customer,

Thank you for making TorkLift your choice for truck, camper packages and accessories for your vehicle. By choosing TorkLift products, you have chosen a company that has been serving the RV industry for nearly 30 years and whose name has become synonymous with strength, quality and advanced design and installation.

Please take a few moments of your time to complete the Product Registration Warranty Card on the next page and send it back to us at the address listed above. When registering your newly purchased TorkLift products, you can be assured that your contact information is secure and that you and your product are getting the attention and respect that you deserve.

Thank you again for choosing TorkLift quality products.



OFFICIAL WARRANTY REGISTRATION CARD

PLEASE FILL OUT THIS FORM COMPLETELY AND RETURN TO TORKLIFT WITHIN 30 DAYS OF PURCHASE ACCOMPANIED BY A COPY OF YOUR ORIGINAL RECEIPT

1. PART(S) PURCHASED

PART#: _____ PART#: _____
PART#: _____ PART#: _____

2. PURCHASER INFORMATION

NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP / POSTAL CODE: _____

PHONE: _____ EMAIL: _____

3. TRUCK INFORMATION

YEAR: _____ MAKE: _____

MODEL: _____ BED LENGTH: _____

4. CAMPER INFORMATION

YEAR: _____ MAKE: _____ MODEL: _____

5. DEALER INFORMATION

PURCHASED FROM: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP / POSTAL: _____

INSTALLED BY: OWNER ABOVE DEALER ANOTHER DEALER

IF ANOTHER DEALER, WHO: _____