



BX1855

2017 Nissan Sentra SR (Includes Turbo) Installation Instructions

Attachment Tab Height: 14"

Attachment Tab Width: 25"

Serial Number

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

1. Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
2. Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.

Bolt Torque Specifications

Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4"	10	14
5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230
3/4"	257	380

Bolt Torque Specifications

Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions

Instruction Notes: The fascia and windshield washer fluid reservoir are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8848 Tail Light Wiring Kit is recommended for this vehicle.

NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite® Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the baseplate if it is damaged or missing parts.


BX1855

2017 Nissan Sentra SR (Includes Turbo)

Installation Instructions

Tools Required

Large Vice Grip
 Flat Screwdriver
 Torque Wrench
 Reciprocating Saw
 Drill
 Loctite® RED
 3/8" Drill Bit
 10MM Socket
 7/16" Socket
 7/16" Wrench
 9/16" Socket
 9/16" Wrench
 5/16" Nut Driver
 1" Hole Saw

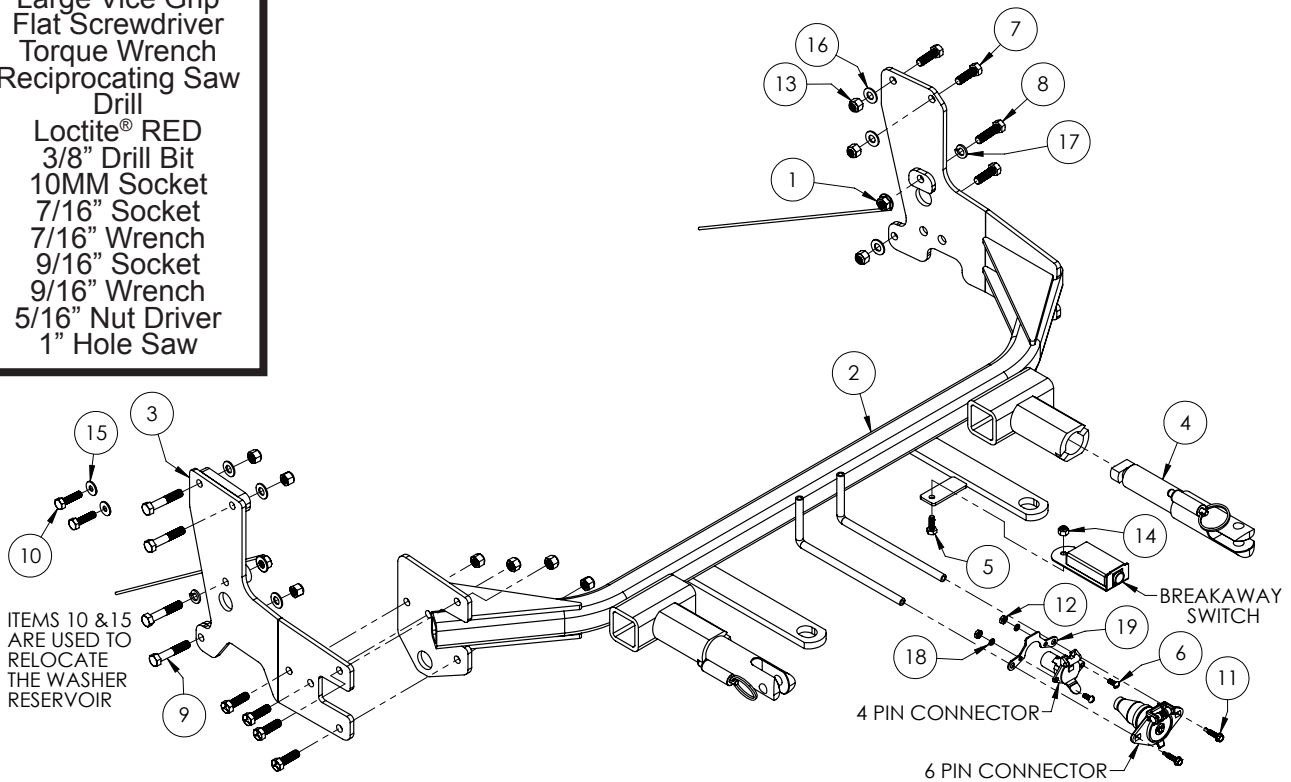


Item No.	Part No.	Description	Qty.
1.....	61-4978	3/8"-16 Whiz Nut w/ 14" Wire	2
2.....	61-7863	BX1855 Baseplate.....	1
3.....	61-7864	BX1855 Baseplate PS.....	1
4.....	62-3469	Attachment Tab Assembly with Hole	2
5.....	201-0050	1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP	1
6.....	201-0192	#10-32 1/2" Round Slotted Head Screw.....	2
7.....	201-0368	3/8"-16 x 1-1/4" Hex Head Bolt, Grade 5, ZP	7
8.....	201-0440	3/8"-16 x 1-1/2" Hex Head Bolt, Grade 5, ZP	1
9.....	201-0444	3/8"-16 x 2" Hex Head Bolt, Grade 5, ZP	4
10.....	201-0446	8MM-1.25 x 30MM Hex Head Bolt, Grade 8.8, ZP.....	2
11.....	201-0979	#12-14 x 1" Self Drilling Screw, ZP.....	2
12.....	202-0047	#10-32 Hex Nut	2
13.....	202-0090	3/8"-16 Hex Nylon Insert Lock Nut, ZP.....	10
14.....	202-0102	1/4"-20 Hex Nylon Nut, ZP	1
15.....	203-0001	1/4" Flat Washer, ZP.....	2
16.....	203-0003	3/8" Flat Washer, ZP.....	6
17.....	203-0010	3/8" Lock Washer, ZP	2
18.....	203-0054	#10 Lock Washer, ZP	2
19.....	299-0685	4-Way Bracket.....	1
20.....	226-0046(not shown)	Class III Safety Cables	2
21.....	229-0359(not shown)	3/8" Quicklink, ZP	2
22.....	290-0437(not shown)	Black Cap Plug Receiver.....	2


Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions

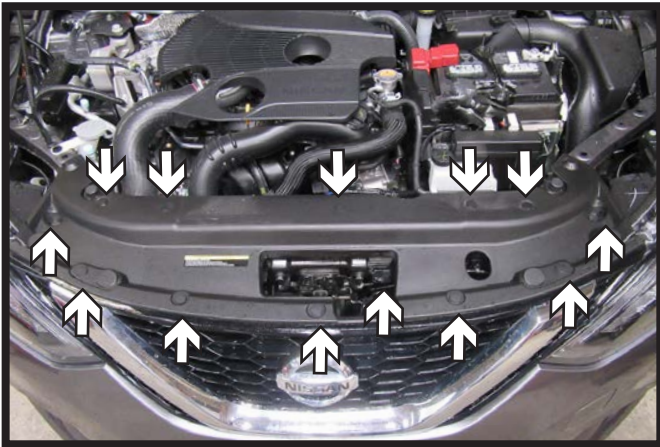


1. Remove thirteen (13) push pins from the fascia cover. Remove fascia cover and set aside.

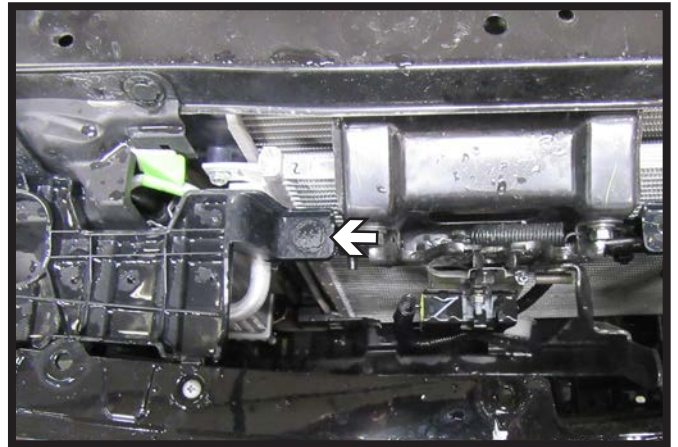

2. Remove the one (1) push pin, and remove the plastic piece.





3. Using a flat screwdriver, push in the pictured clip, and pop the plastic piece out. Do this for both sides of the vehicle.

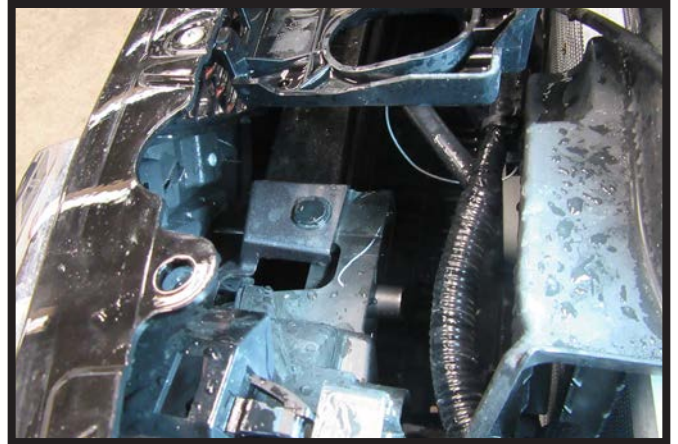


4. Remove the push pin from the inner fascia. Do this for both sides of the vehicle.

BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions

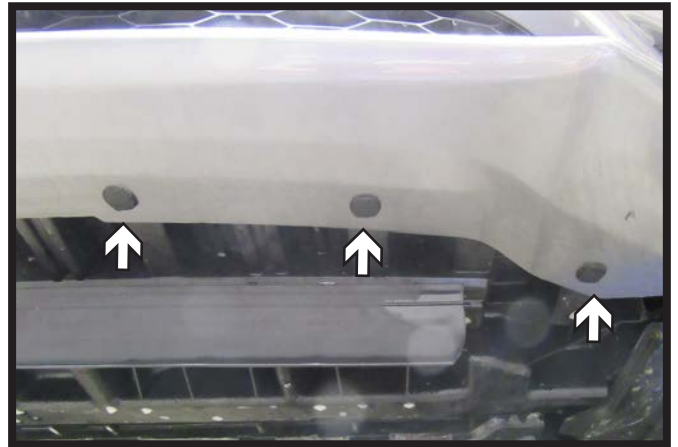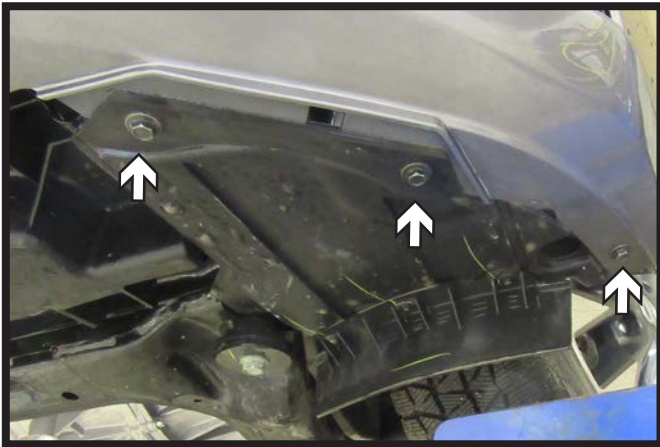

5. Using 10MM socket, underneath the fascia, remove three (3) bolts. Next, remove three (3) push pins. Do this for both sides of the vehicle.

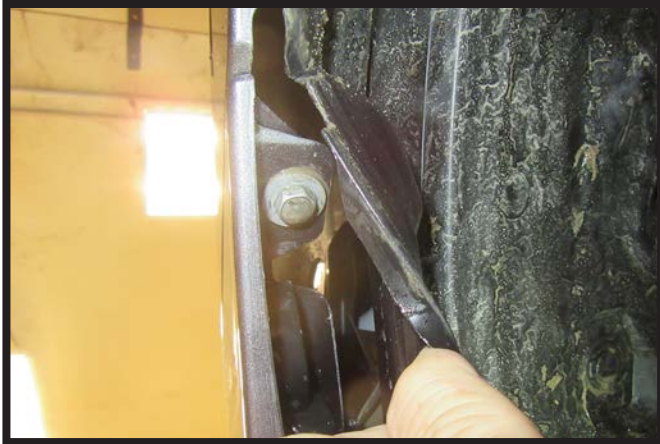

6. Using a 10MM socket, remove the bolt from behind the wheel well cover where the fascia meets the fender. Do this on both sides of the vehicle.





7. Pull the corners of the fascia away from the vehicle disconnecting any electrical connections and set the fascia aside.

BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions



8. Using a reciprocating saw, trim the plastic shrouding approximately as shown for baseplate clearance.

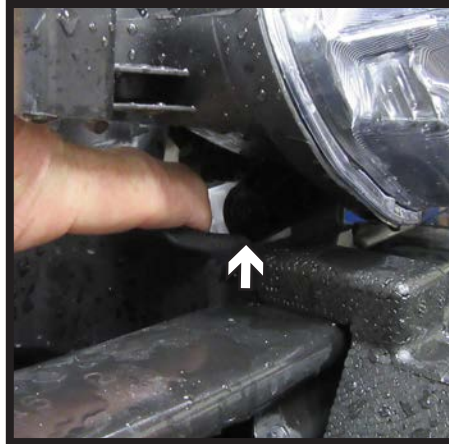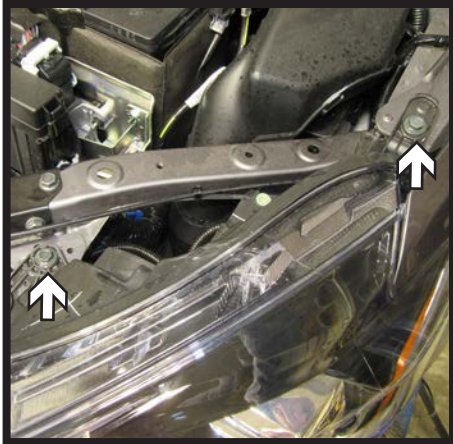


9. Using a 10MM socket, remove four (4) bolts, with two (2) on top, one (1) below, and one (1) on the side. Disconnect the wiring, remove headlights and set aside. Do this for both sides of the vehicle.

BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions




10. Remove the one (1) push pin from the top of the windshield wiper fluid reservoir. Using a 10MM socket, remove the one (1) bolt from the upper front of the reservoir, and the one (1) bolt on the back side of the reservoir. Unplug the two (2) connections from the front of the reservoir, plug the fluid lines, and remove the reservoir.

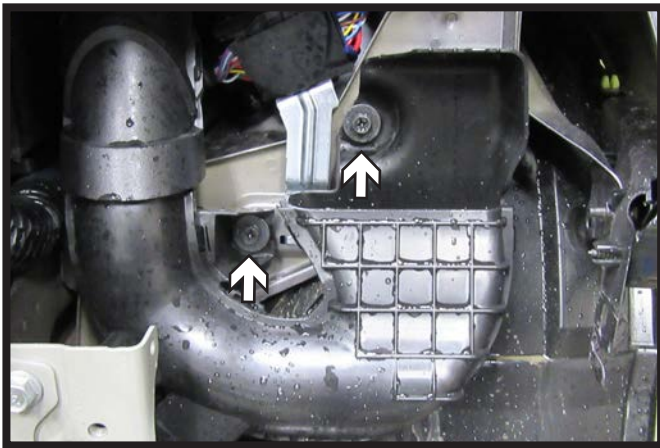

11. Using a 10MM socket, remove the three (3) screws from the air baffle. There are two (2) on the front top, and one (1) on the backside, between the wheel well cover and the baffle.

BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions

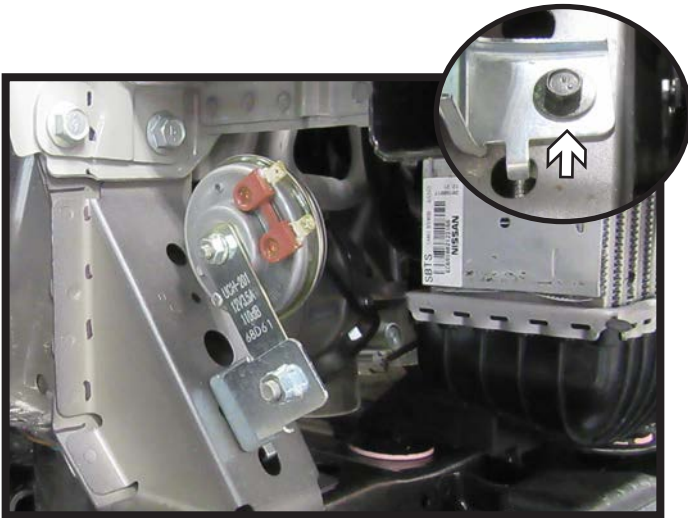

12. Using a 10MM socket remove the horn and horn bracket from the passenger side to be reinstalled later.



13. On the passenger side use a reciprocating saw to cut along the marked area (black) across and down. Then make two (2) slots (red) as indicated. Using a hammer bend the piece forward along the dotted line.




14. On the driver side use a reciprocating saw to cut along the marked area (black) across and down. Then make two (2) slots (red) as indicated. Use a hammer to bend the piece forward along the dotted line.



15. Using a hammer flatten out the indicated piece so that it will not interfere with the baseplate. Do this for both sides of the vehicle.


BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions

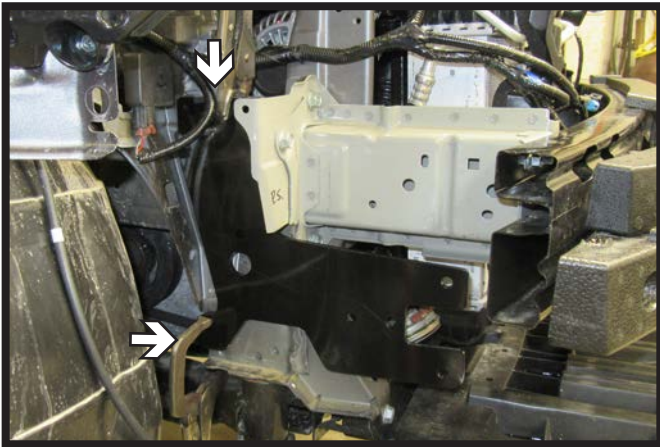


16. Slide on the passenger side plate so that it is level at the top of the frame and flush with the bottom back piece as indicated. Use vice grip to hold into place.



17. Drill one (1) 3/8" hole and start a 3/8" x 2" bolt with a flat washer and nylon lock nut on the back.

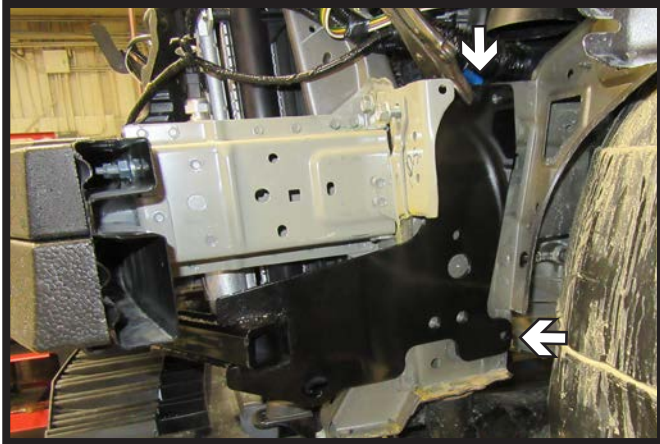


18. Attach cross member so that the driver side plate is level at the top of the frame and flush with the bottom back piece as indicated. Use vise grip to hold into place.

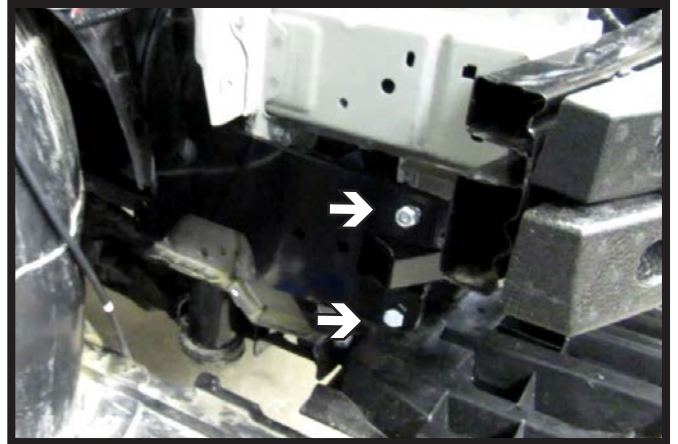


19. Start two (2) 3/8" x 1-1/4" bolts with nylon lock nuts on the back on the passenger side.


BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions

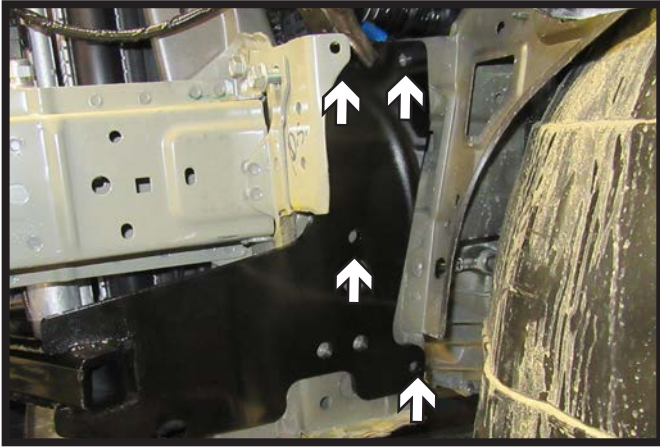


20. On the driver side of the vehicle start drilling the four (4) 3/8" holes need for the bracket. Start with the top two (2) holes, then drill the bottom hole, and finally drill the middle hole. Make sure the bracket stays level while drilling each hole.

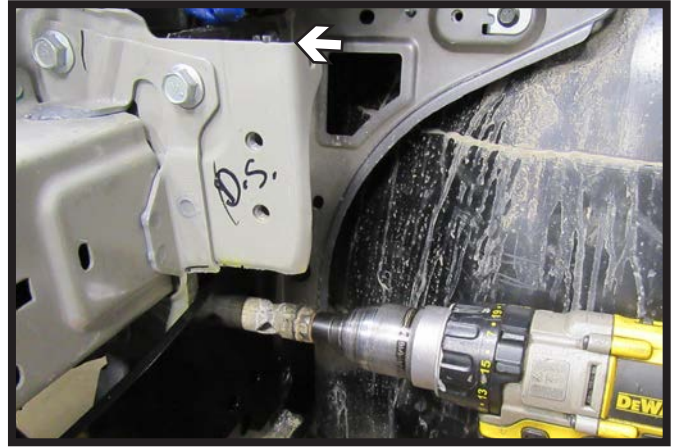

21. On the driver side start a 3/8"-16 x 1-1/4" Hex Head bolt with the flat washer and nylon lock nut on the back in one (1) of the top drilled holes. Then using a 1" hole saw drill out the center access hole, do this on both sides of the vehicle.

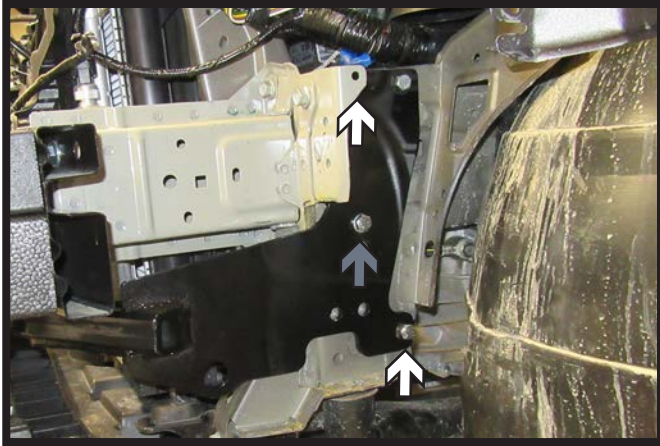


22. On the driver side install the two (2) remaining 3/8"-16 x 1-1/4" Hex Head bolts with a flat washer and nylon lock nut on the back as indicated (white). Then insert one (1) 3/8"-16 x 1-1/2" Hex Head bolt and a Whiz nut with 14" wire on the back (gray).

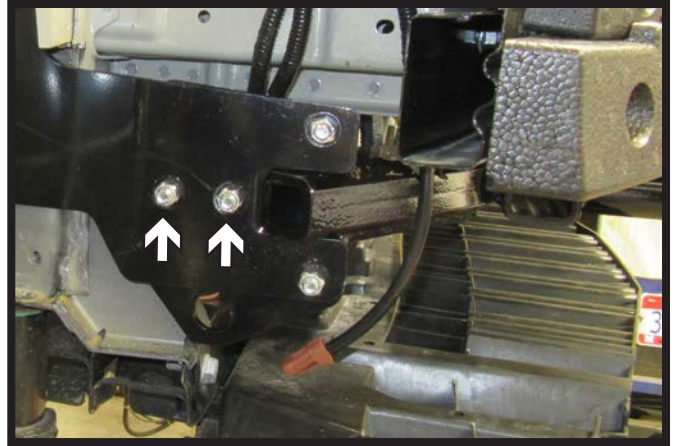


23. On the passenger side install the remaining two (2) 3/8" x 1-1/4" bolts with nylon lock nuts on the back.

**** Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque.**

BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions

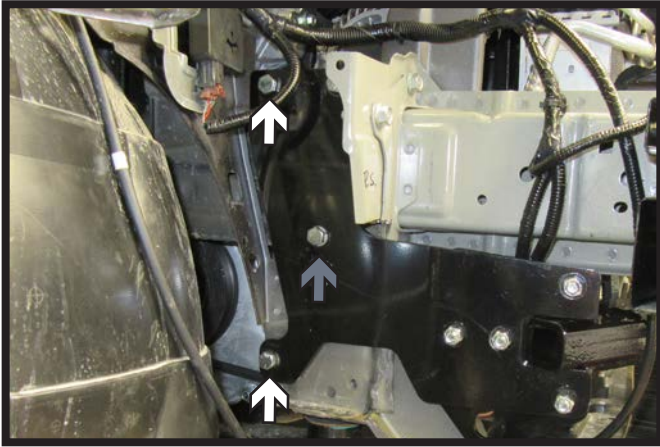

24. On the passenger side insert the two (2) remaining 3/8"-16 x 1-1/4" Hex Head bolts with a flat washer and nylon lock nut on the back as indicated (white). Then insert one (1) 3/8"-16 x 1-1/2" Hex Head bolt and a Whiz nut with 14" wire on the back (gray).

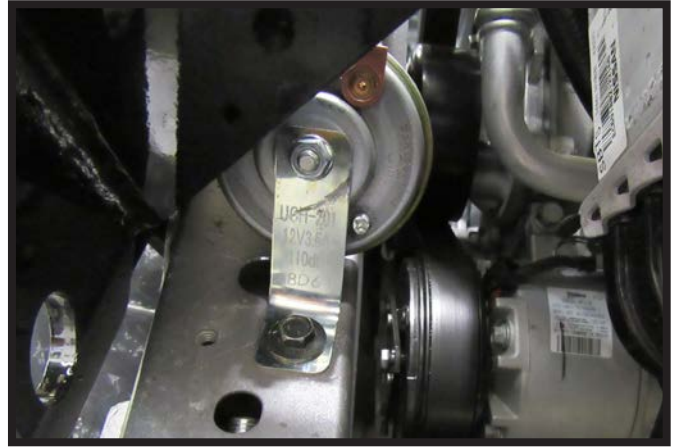

25. Bend the horn bracket to allow for baseplate clearance and reattach the horn as indicated.



26. When reattaching the windshield wiper fluid reservoir slot out the top hole using a drill bit as indicated so that the reservoir does not hit the baseplate. Then use a 6MM x 30 bolt with a flat washer when reattaching the bottom of the reservoir. Reconnect fluid lines.



27. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.

BX1855
2017 Nissan Sentra SR (Includes Turbo)
Installation Instructions



Optional Breakaway: Bolt the breakaway to the baseplate bracket with the supplied 1/4" hardware.



28. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the fascia and fascia cover.

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2016 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com

General Information

1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/or recalls.
2. **It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip.** Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
3. **It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/recommendations.**
4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

1. It is YOUR responsibility to watch for:

- Oil cooler and air conditioner lines
- Electrical wires and hoses
- Missing parts or attaching points on the frame

** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation


Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.


Option #1

(Baseplates with Convenience Link Tabs)

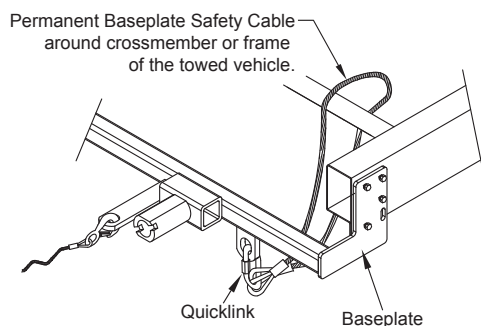

Option #2

(Baseplates with out Convenience Link Tabs)

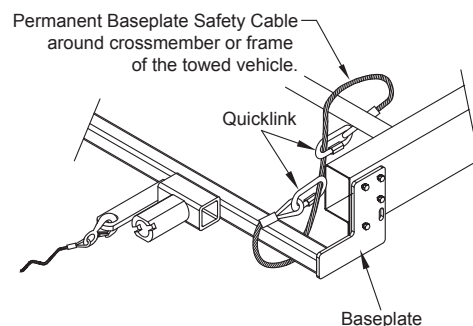

BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit <http://blueox.com/warranty/> to register your warranty

