


12231

LEXUS LS 430 SEDAN

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2500 LBS. TRAILER WEIGHT & 250 LBS. TONGUE WEIGHT.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

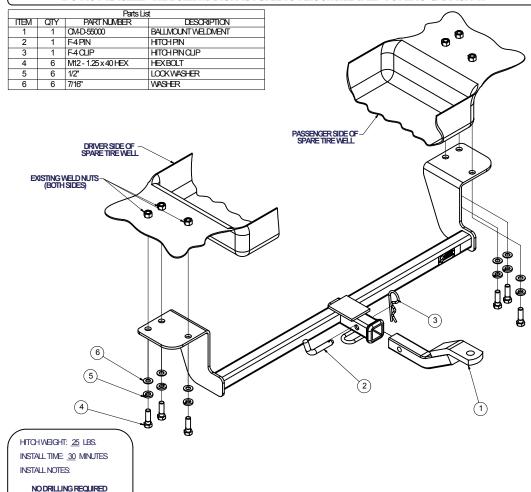

INSTALLATION STEPS

- Under the rear of the car, locate the exhaust mufflers at the left and right side of the car. The mufflers are supported at the rear of the vehicle by flexible supports and brackets botted into the chassis with three 12mm screws per bracket.
- 2) Temporarily remove these brakeets from the chassis on both sides. Position the hitch on the vehicle at these same mounting points. Re-mount the brackets at the bottom of the hitch brakeets on both sides. Mount using fasteners provided with the hitch.
- 3) Torque all 12mm fasteners to 65 lb-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO INSURE THAT ALL FASTNERS
ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Out Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Out Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product viols the warranty. Out Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.