


Rota-Flex Lockout Kit for Andersen Ultimate Connection (part #3247)

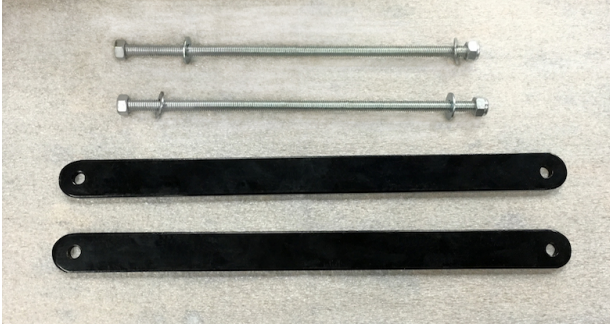


The Rota-Flex Lockout Kit (left) consists of 2 steel bars, 2 threaded bolts, 4 washers and 2 lock nuts.

Installation Instructions


1. Place one of the steel bars in the front of your pin box underneath the front lip as shown right.




2. Place the other steel bar in the back of the pin box above the lip as shown left and below.

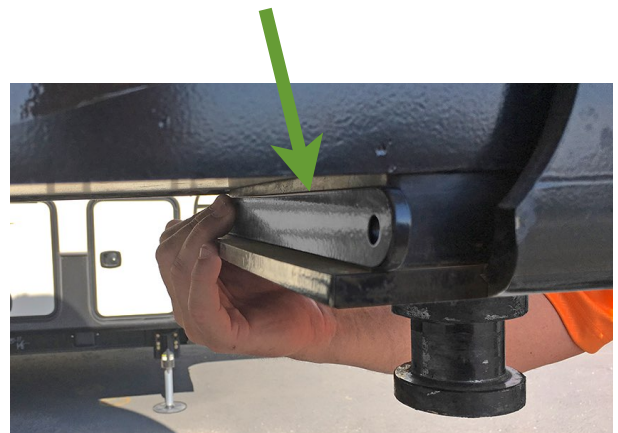

3. Next push the two threaded bolts (with washers in place) through holes in the steel bars. Make sure both bolts are inside of the rotating plate as shown right (arrow).

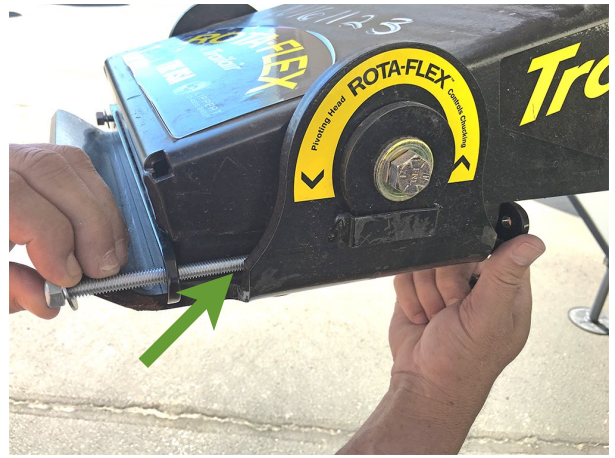

4. Now place the remaining washers and lock nuts onto the ends of the threaded bolts as shown right.

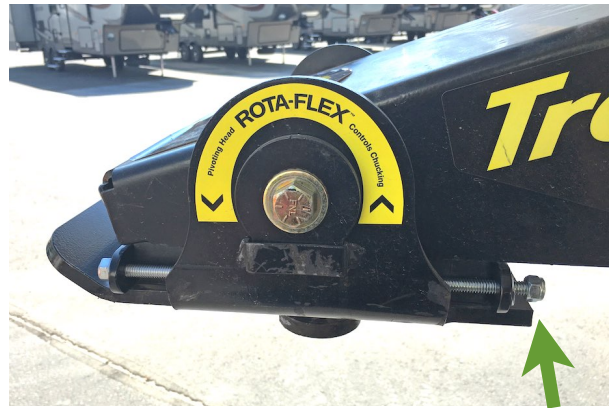

5. Finally, tighten the lock nuts down. Be careful not to over tighten and strip them - they simply need to keep the two bars in place.

You are done!

NOTE: There may be a little space above the bars when installed. This is fine as they only need to prevent full rotation – a small amount of rotation is okay.

Questions or concerns? Call Andersen Customer Service at 800-635-6106