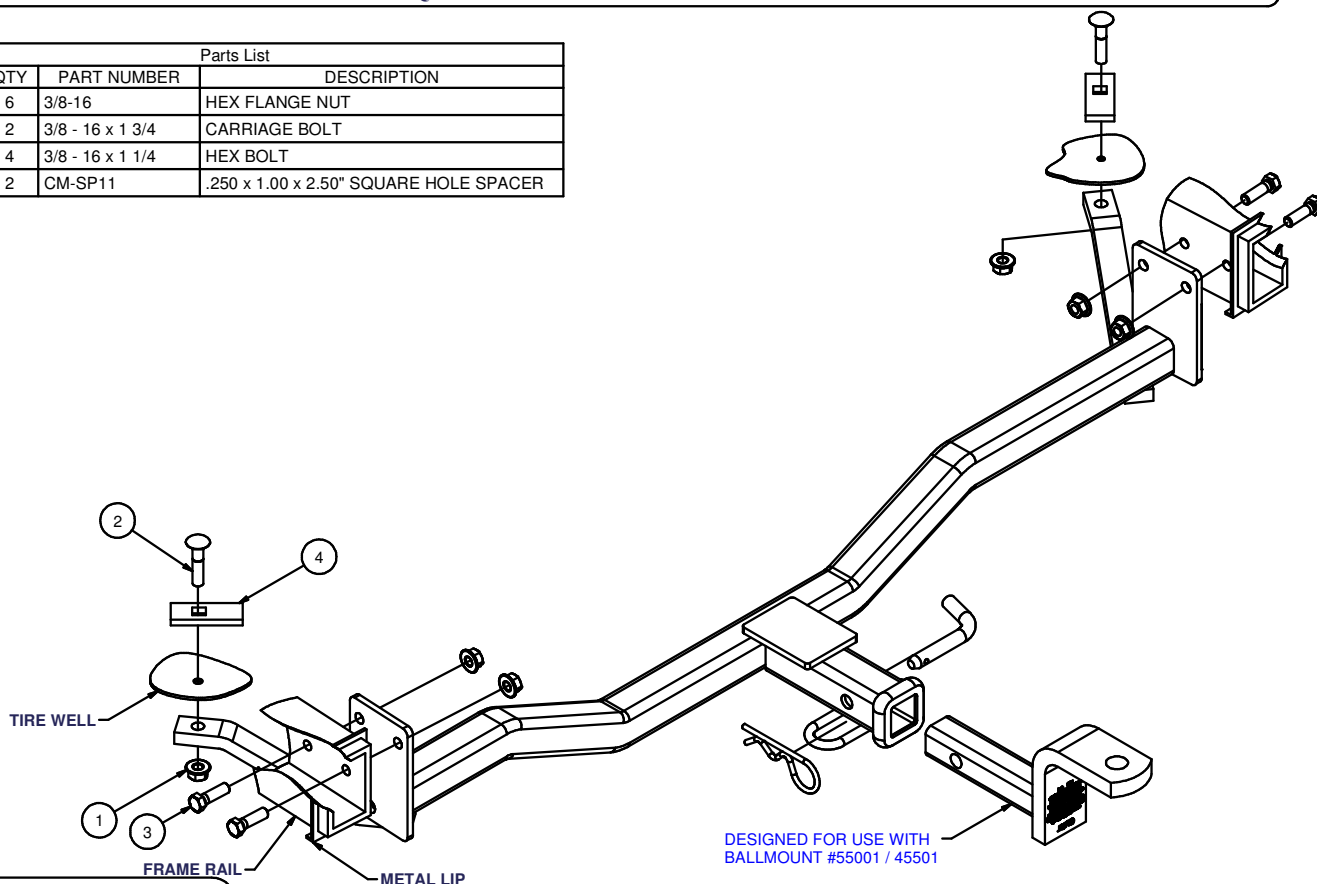


11011 / 247257**97-99 VOLKSWAGEN CABRIO CONVERTIBLE (GOLF)
93-99 VOLKSWAGEN GOLF HATCHBACK (EXC. GTI, VR6, 95-98)****11/12/2012****GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.*******DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*******WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.****** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY ******HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813**

Parts List				
ITEM	QTY	PART NUMBER	DESCRIPTION	
1	6	3/8-16	HEX FLANGE NUT	
2	2	3/8 - 16 x 1 3/4	CARRIAGE BOLT	
3	4	3/8 - 16 x 1 1/4	HEX BOLT	
4	2	CM-SP11	.250 x 1.00 x 2.50" SQUARE HOLE SPACER	

**HITCH WEIGHT: 22 LBS.****INSTALL TIME****PROFESSIONAL: 120 MINUTES****NOVICE (DIY): 240 MINUTES****INSTALL NOTES:****DRILLING REQUIRED****INSTALLATION STEPS**

- 1) Remove the car's rear bumper. There are seven bolts holding the fascia in place, four along the top, under plastic covers and three along the bottom. The fascia will then unsnap from the tire wells and slide rearward. The bumper beam is removed by removing four 13mm nuts attaching bumper to frame rails.
- 2) Disconnect muffler at hanger by sliding rubber hanger off post. Remove heavy undercoating from frame surface where frame plates make contact. Lift hitch into position under car as shown. Hitch should be as far rearward as possible against metal lip. With hitch in position and level, mark frame plate holes for drilling. Remove hitch and drill 3/8" holes in frame rails.
- 3) Shorten muffler post 1/4" to 1/2" at this time for clearance if necessary. Reinstall hitch and loosely install fasteners. Using hitch as a template drill two 3/8" holes for mounting arms. Install hardware as shown.
- 4) Torque all hardware to 45 lb.-ft. Reinstall bumper and bumper fascia that was removed in step 1. Reattach muffler hanger removed in step 2.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS
ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**

Curt Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.