## 75-84 VW RABBIT, 75-81 VW SCIROCCO

## 12/7/2012


11653

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 1,500 LBS. TRAILER WEIGHT & 150 LBS. TONGUE WEIGHT. \*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

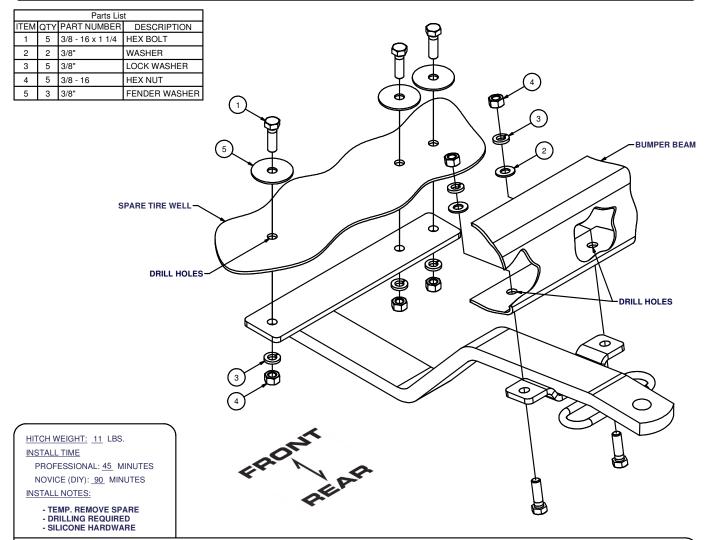

## **INSTALLATION STEPS**

- 1. Temporarily remove the spare tire. Position the hitch against the underside of the trunk floor (spare tire well) and the rear bumper as shown. Support the hitch in place making sure it is square and centered on the car. Adjust the hitch fore/aft for ball/bumper clearance.
- 2. Using the hitch as a template, mark and drill the car (3) places in the trunk floor and (2) places in the rear bumper for 3/8" diameter mounting bolts.
- 3. Fasten the hitch to the car as shown. Be certain to use fender and flat washers as shown.
- 4. Use silicone caulk around fasteners installed in trunk to seal out water and exhaust fumes.
- 5. Torque all 3/8" fasteners to 45 lb-ft.
- 6. Re-install spare tire.

## PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.