

YEARS: 2017-PRESENT

MAKE: JAGUAR

MODEL: F-PACE

STYLE: CUV

WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY
 For more information log onto www.curtmfg.com & for helpful towing tips log onto www.hitchinfo.com

WEIGHT CARRYING:
 TRAILER WEIGHT: 6,000 LBS.
 TONGUE WEIGHT: 900 LBS.

WARNING:
 WE RECOMMEND THE USE OF 18050 STABILIZING STRAPS FOR ALL NON-TRAILER (WHEEL-LESS) LOADS. PLEASE SEE THE CURT CATALOG OR VISIT US ONLINE AT WWW.CURTMFG.COM FOR FURTHER INFORMATION.

PRO INSTALL TIME: 60 MIN.
NOVICE INSTALL TIME: 120 MIN.

IF YOU ARE HESITANT TO UNDERTAKE THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED CURT INSTALLER FOR ADDITIONAL ASSISTANCE.

INSTALLATION TIPS:

- BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
- TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
- USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.
- NEED HELP OR HAVE SOME QUESTIONS? CALL TECHNICAL SUPPORT AT 800.798.0813




INSTALLATION REQUIRES:

RATCHET	TORQUE WRENCH	6" SOCKET EXTENSION
8mm 10mm 21mm SOCKET	T25 TORXBIT SOCKET	SCREW DRIVER
PLASTIC PRY TOOL	MASKING TAPE	AVIATION SHEARS
SAFETY GLASSES		

LEVEL OF DIFFICULTY: MODERATE

EASY	MODERATE	CHALLENGING
	TEMPORARILY REMOVE UNDERBODY PANEL AND BUMPER FASCIA	
	TRIMMING REQUIRED	

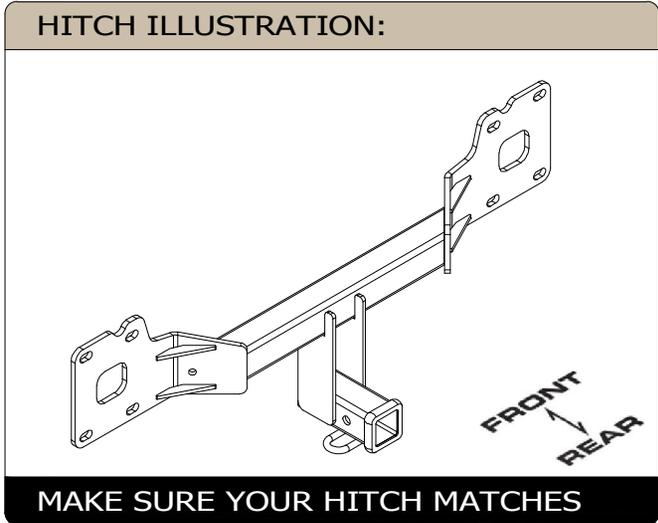

SCAN FOR MORE INFO


PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE ALL FASTENERS ARE TIGHT AND ALL STRUCTURAL COMPONENTS ARE SOUND

CURT Manufacturing LLC. warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC. may repair or replace the product at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

For more information log onto www.curtmfg.com , & for helpful towing tips log onto www.hitchinfo.com

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.

INSTALLATION WALKTHROUGH:

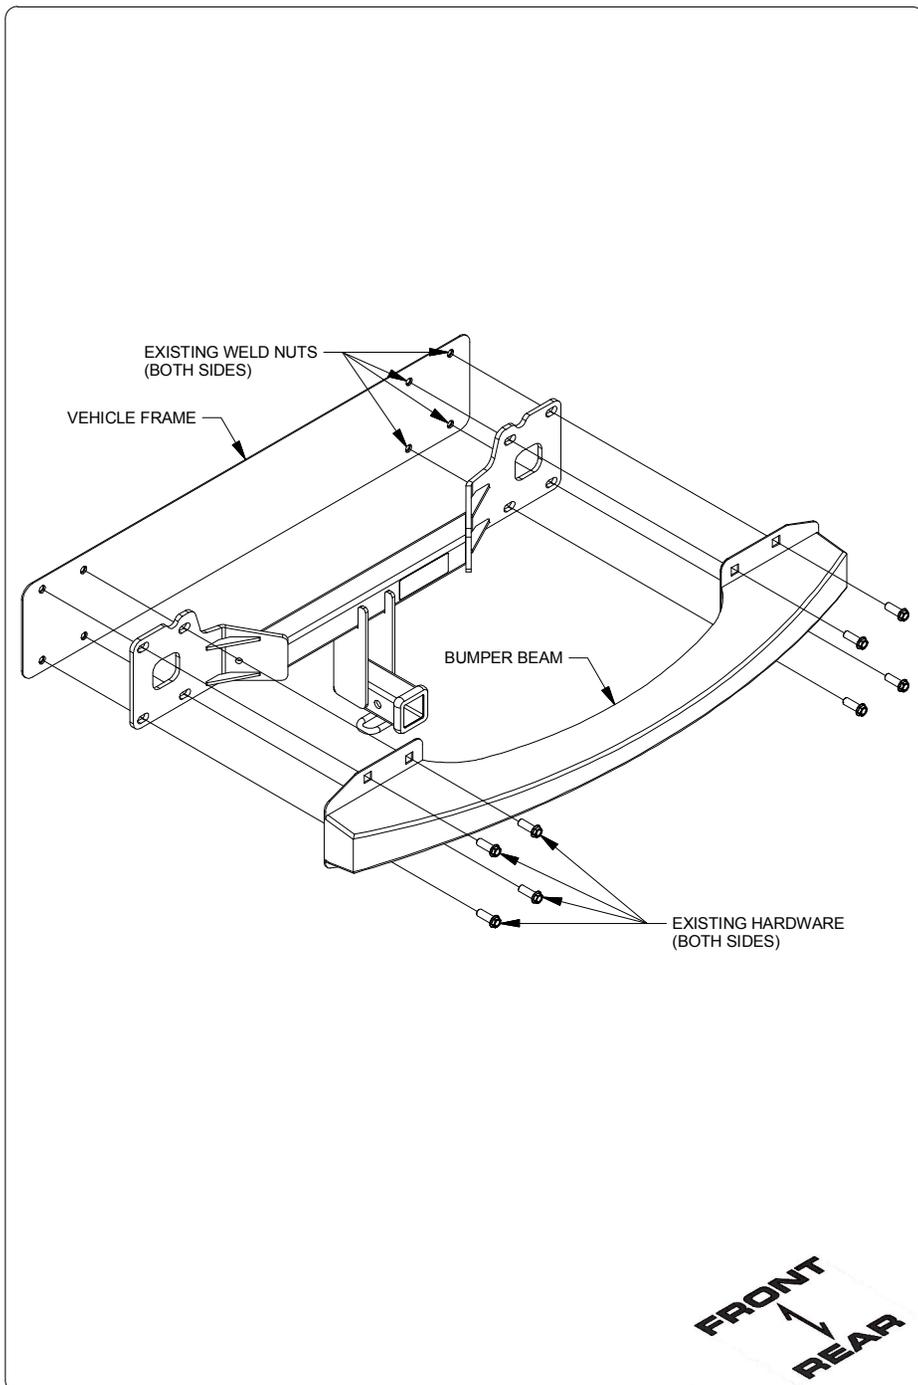

1. On the underbody panel, remove (3) screws using a 10mm socket and (4) screws using a screwdriver. Once removed, mark out a 3.25" x 6" section using masking tape and trim using aviation shears. Set aside for later reinstallation. NOTE: Dimensions are approximate, confirm prior to reinstallation.



2. Inside the wheel well, locate and remove (2) screws using a screwdriver. Once removed pull back wheel well to reveal (5) screws. Remove (2) using a T25 torxbit socket and (3) using a screwdriver. Set wheel well accent piece aside for later reinstallation.





INSTALLATION WALKTHROUGH:

3. Locate and remove plastic cover next to each tail light revealing (1) screw and remove using an 8mm socket. Locate on each side (1) plastic screw and remove using screwdriver. Use plastic pry tool to remove the rest of the plastic push pin. Set aside for later reinstallation.




4. Gently remove the bumper fascia starting at the outside of the vehicle and working towards the rear of the vehicle. Locate on the bumper fascia and unplug (2) electrical plugs. Set aside for later reinstallation.

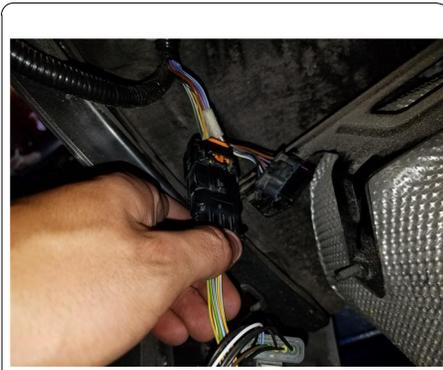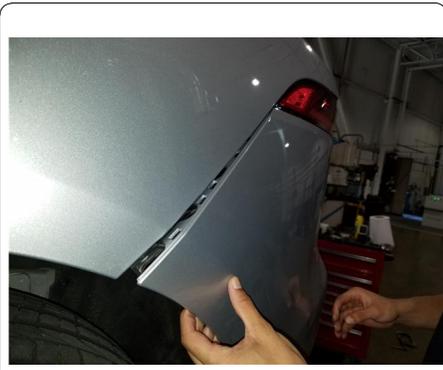

5. Locate along the panel and remove (5) screws using an 8mm socket. Next locate and remove (8) M14 bolts, (4) on each side of the bumper beam using a 21mm socket. Set both pieces aside for later reinstallation.



6. Raise hitch into position lining up the holes with the hole in the bumper beam and loosely fastening the (8) M14 bolts removed from Step 5. Torque the M14 bolts to 126 ft-lbs. Reinstall following steps 1-5 in reverse order.

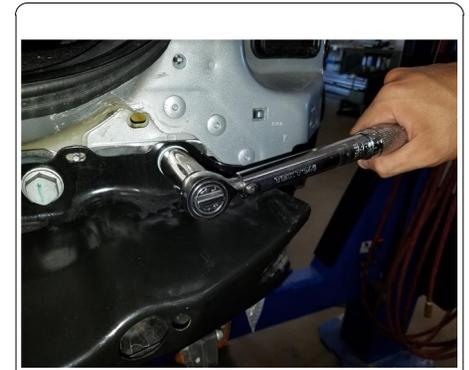

13291

JAGUAR F-PACE

9/16/2016

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 6,000 LBS. TRAILER WEIGHT & 900 LBS. TONGUE WEIGHT.

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.



WARNING: ** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY **


WARNING: * DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY *****

FOR MORE INFORMATION LOG ONTO WWW.CURTMFG.COM & FOR HELPFUL TOWING TIPS LOG ONTO WWW.HITCHINFO.COM
HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813



TOOLS REQUIRED

RATCHET
TORQUE WRENCH
6" SOCKET EXTENSION
8mm, 10mm, 21mm SOCKET
T25 TORXBIT SOCKET
PLASTIC PRY TOOL
SCREWDRIVER
MASKING TAPE
AVIATION SHEARS
SAFETY GLASSES

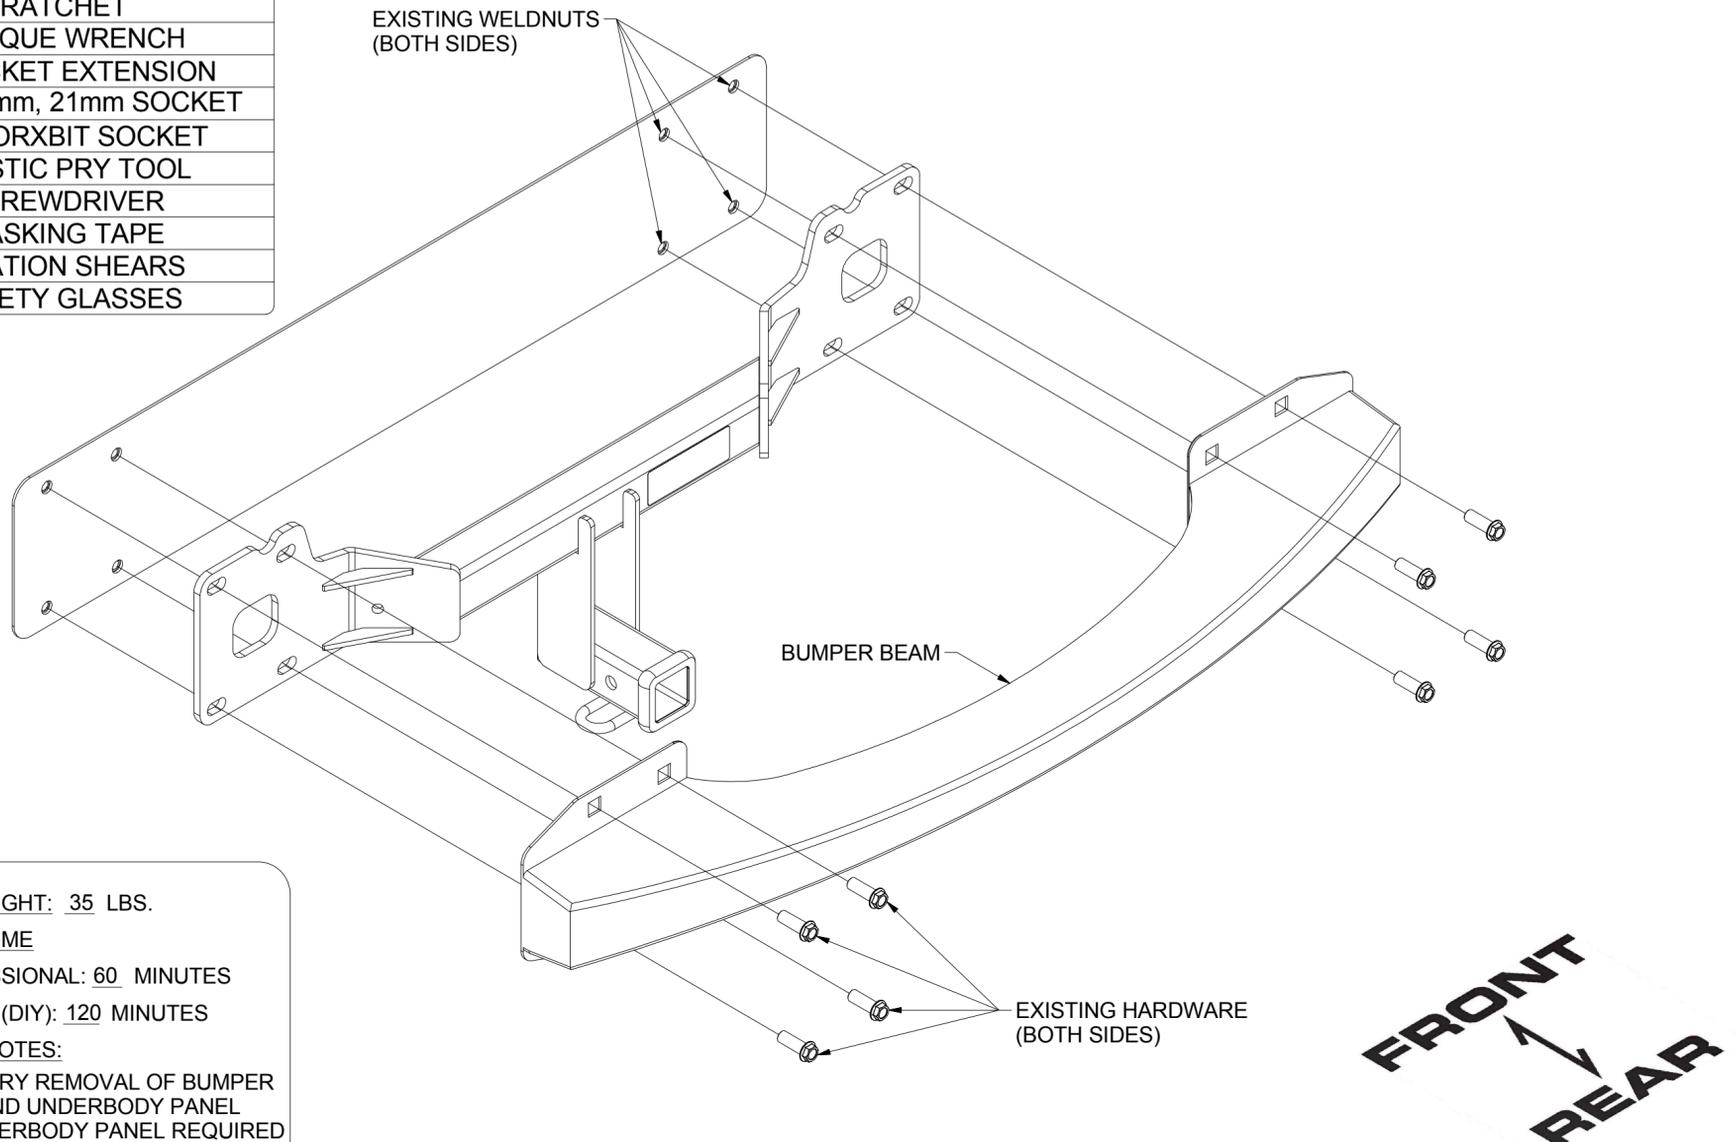

HITCH WEIGHT: 35 LBS.

INSTALL TIME

PROFESSIONAL: 60 MINUTES

NOVICE (DIY): 120 MINUTES

INSTALL NOTES:

- TEMPORARY REMOVAL OF BUMPER FASCIA AND UNDERBODY PANEL
- TRIM UNDERBODY PANEL REQUIRED

INSTALLATION STEPS

1. On the underbody panel, remove (3) screws using a 10mm socket and (4) screws using a screwdriver. Once removed, mark out a 3.25" x 6" section using masking tape and trim using aviation shears. Set aside for later reinstallation. NOTE: Dimensions are approximate, confirm prior to reinstallation.
2. Inside the wheel well, locate and remove (2) screws using a screwdriver. Once removed pull back wheel well to reveal (5) screws. Remove (2) screws using a T25 torxbit socket and (3) using a screwdriver. Set wheel well accent piece aside for later reinstallation.
3. Locate and remove plastic cover next to each tail light revealing (1) screw and remove using an 8mm socket. Locate on each side (1) plastic screw and remove using screwdriver. Use plastic pry tool to remove the rest of the plastic push pin. Set aside for later reinstallation.
4. Gently remove the bumper fascia starting at the outside of the vehicle and working towards the rear of the vehicle. Locate on the bumper fascia and unplug (2) electrical plugs. Set aside for later reinstallation.
5. Locate along the panel and remove (5) screws using an 8mm socket. Next locate and remove (8) M14 bolts, (4) on each side of the bumper beam using a 21mm socket. Set both pieces aside for later reinstallation.
6. Raise hitch into position lining up the holes with the hole in the bumper beam and loosely fastening the (8) M14 bolts removed from Step 5. Torque the M14 bolts to 126 ft-lbs. Reinstall following steps 1-5 in reverse order.



Scan for more information

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

CURT Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.