

55323

CHRYSLER TOWN & COUNTRY
DODGE CARAVAN
DODGE DAKOTA
DODGE GRAND CARAVAN
PLYMOUTH GRAND VOYAGER
PLYMOUTH VOYAGER

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

02/13/09

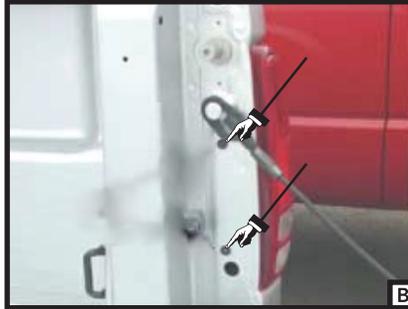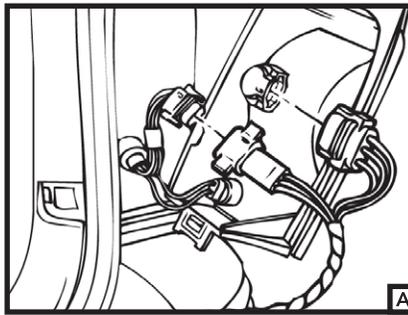

English

ALL VANS

1. Remove the drivers side taillight and disconnect the top connector being sure not to damage the locking tabs. Repeat on passengers side. **[A]**

2. Starting in the center of the vehicle route the T-connector end with the yellow wire to the driver's side tucking the wire in-between the bumper and the body as you go. Insert the T-connector end with the yellow wire in-between the disconnected connectors. Repeat using the green wire on the passenger's side.

3. Re-install the taillights. Secure 4-Flat in a convenient out of the way location under the vehicle.

DAKOTA

1. On the drivers side remove the taillight assembly by removing the two phillips screws holding it in place. **[B][C]** Repeat on the passengers side.


2. On the drivers side disconnect the vehicles wiring harness **[D]** and insert the T-connector end with the yellow wire in-between the disconnected connector.

3. Route the T-connector end with the green wire down thru the opening under the taillight assembly. Along the back side of the bumper under the vehicle and up thru the opening on the passengers side. **[E]** Repeat step 2 on the passengers side.

4. Re-install the taillights. Secure 4-Flat in a convenient out of the way location.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

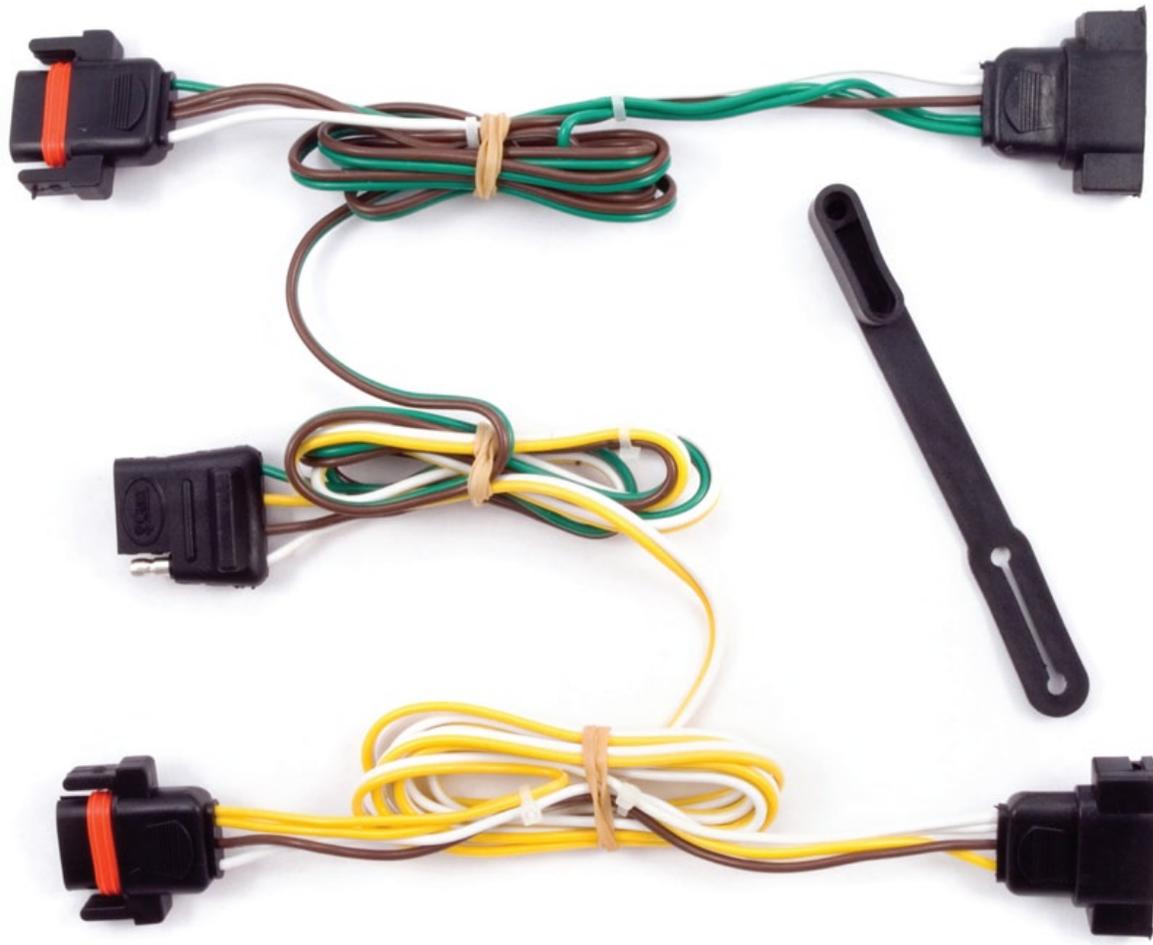

55323