

55528

HYUNDAI TUCSON

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement fileté.

02/18/09

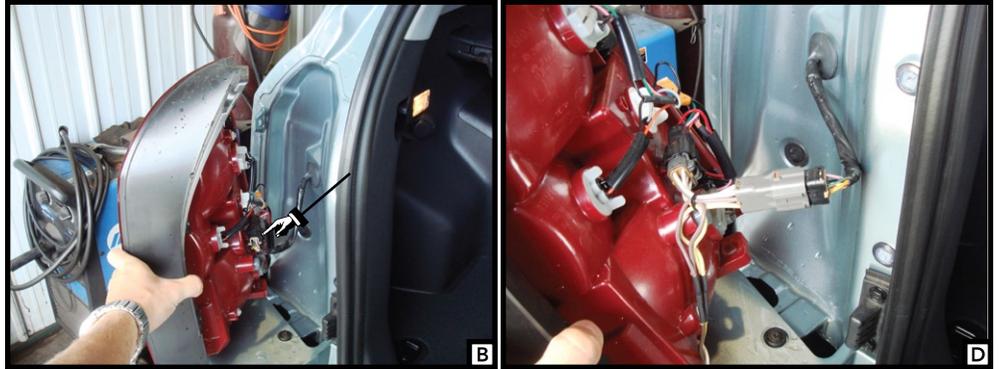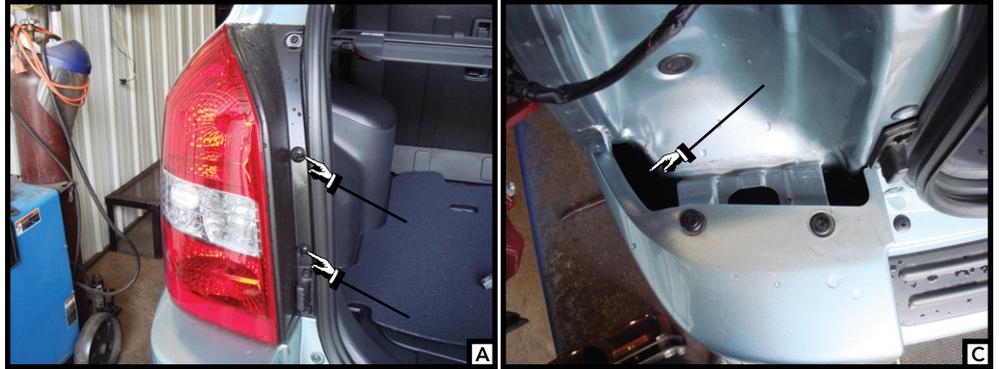

English

1. Open the hatch and remove the vehicles taillight housings by removing the two phillips head screws.[A]Separate the vehicles connector from the back of the taillight housing.[B]

2. On the drivers side route the T-Connector end with the yellow wire up thru the opening under the taillight housing.[C] Insert in-between the seperated connectors.[D]

3. Route the T-connector end with the green wire along the back side of the bumper to the passenger side. Repeat step 2 on the passenger side using the green wire.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

6. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



55528