


# 55534

CHRYSLER 300  
DODGE CHALLENGER  
DODGE CHARGER

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS

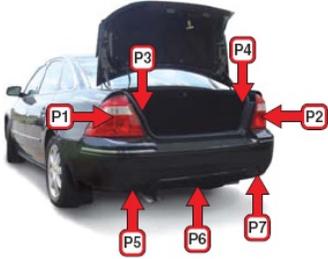

### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

02/10/09



## English

1. On the drivers side remove the plastic wing nut securing the trunk liner. **[A]** Pull back on the trunk liner to expose the vehicles taillight wiring harness. **[C]** Repeat on the passenger side. Partially remove the vehicles trunk scuff panel. **[A]**

2. On the drivers side insert the T-connector end with the yellow wire between the separated connectors. Route the T-connector end with the green wire to the passenger side under the scuff panel.


3. Repeat step 2 on the passenger's side. Re-install the scuff panel.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

5. Route the 4-flat wire to the center of the vehicle and out the trunk when in use. When not in use roll up and store in an out of the way location in the trunk.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

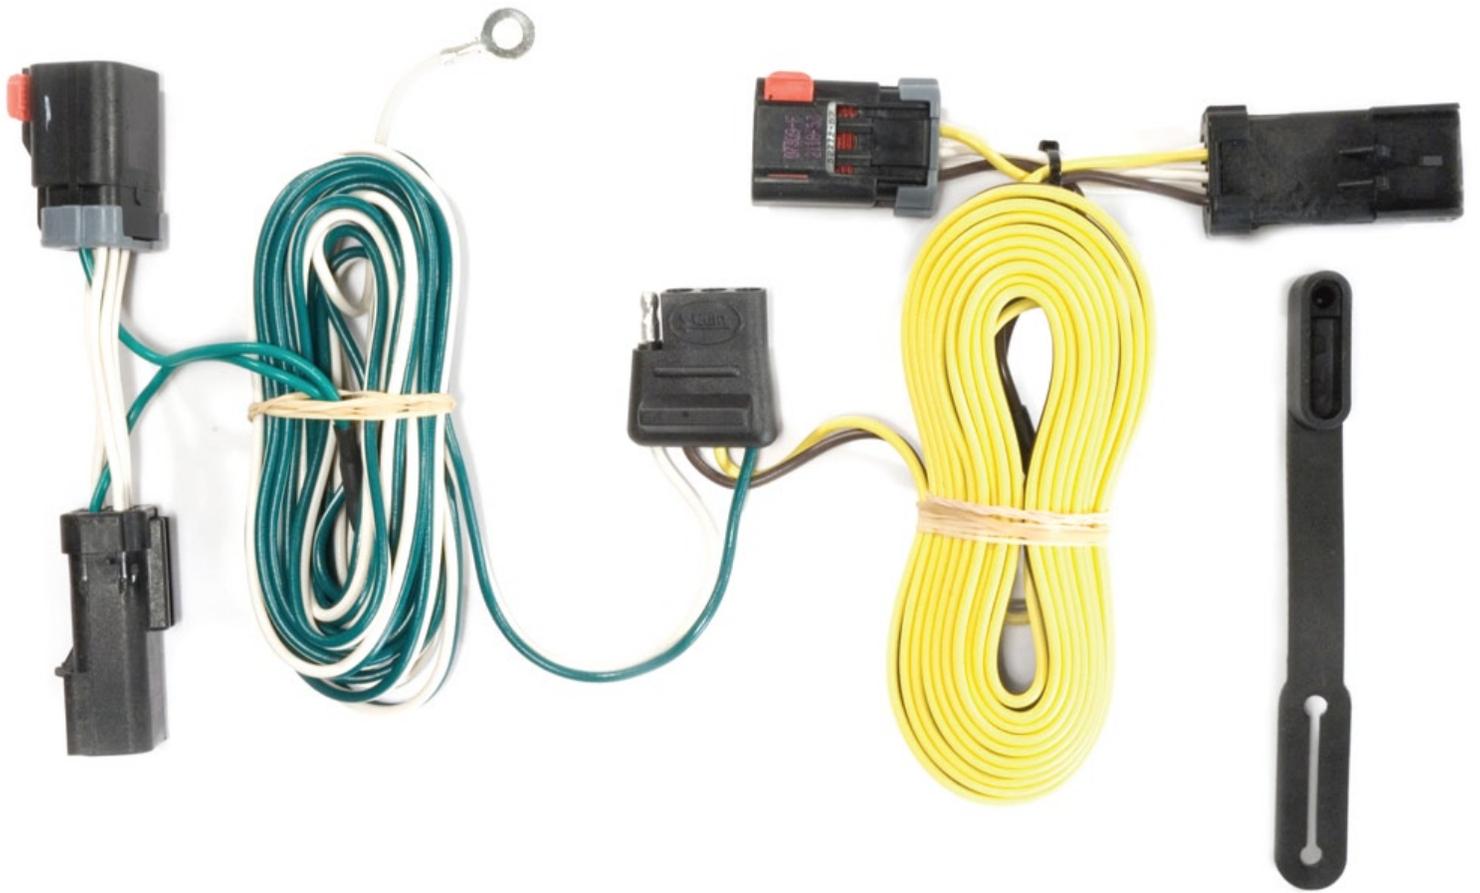

55534