

56032

FORD F-250 & F-350 SUPERDUTY

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

4/13/09




English

1. Locate the vehicles taillight wiring harness it is located under the vehicle just behind the rear bumper in the center of the vehicle. **A** The harness connectors will be similar to those on the T-connector harness. **B**
2. Separate the connectors being sure not to damage the locking tabs. **C** Insert the T-connector end in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place. **D**
3. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

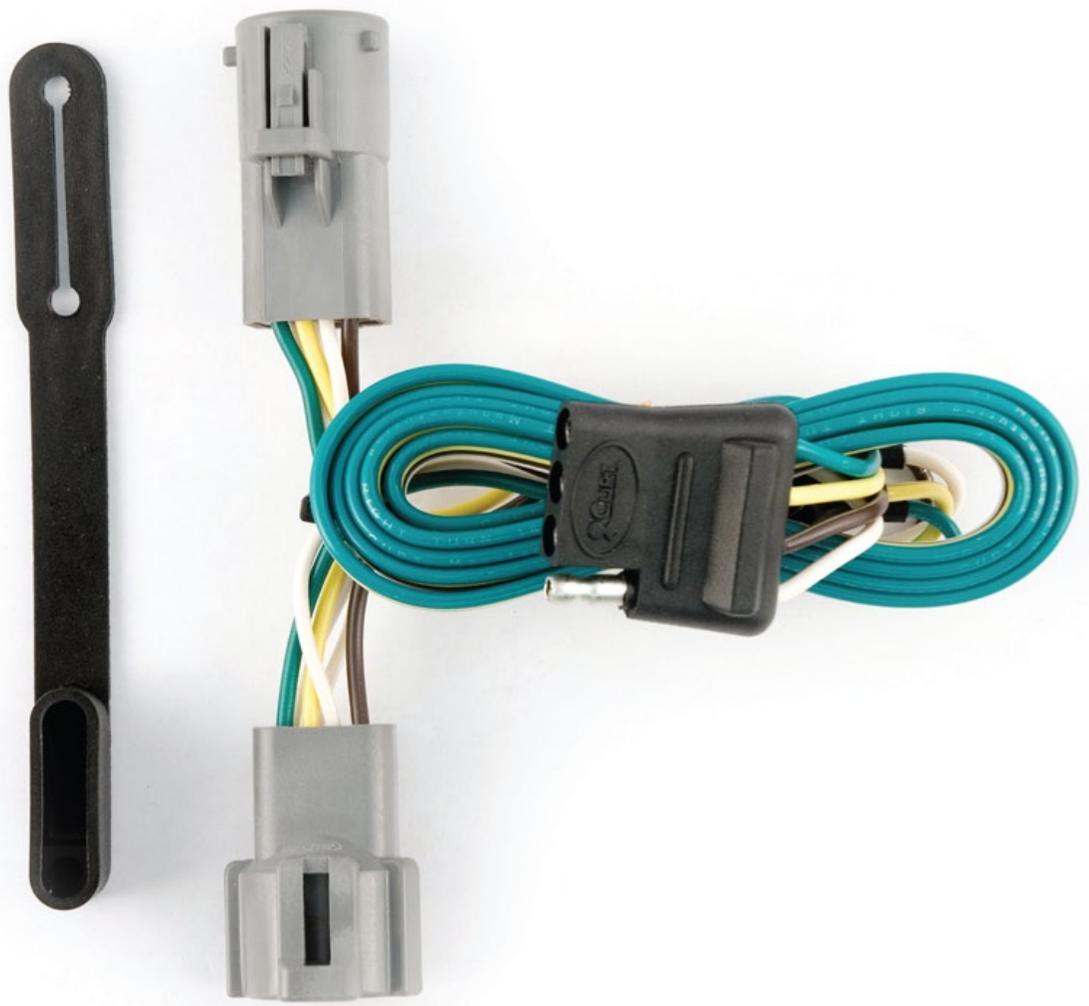

56032