

56037

DODGE JOURNEY

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

03/24/09

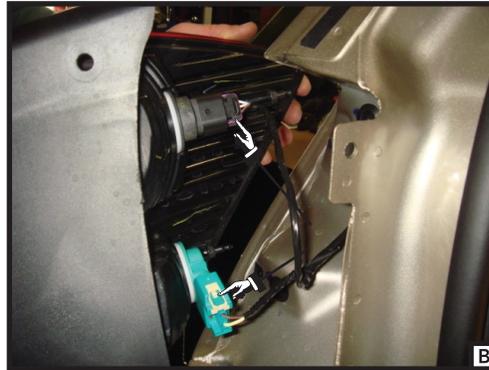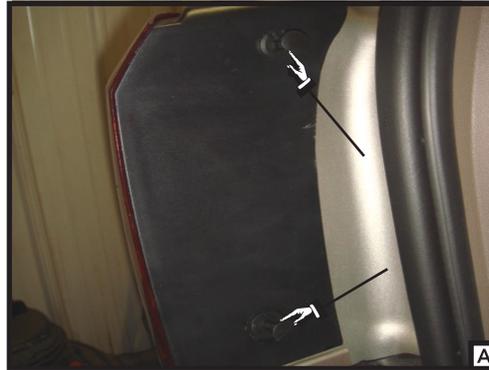

English

1. Open the tailgate and remove taillight assemblies by removing two plastic clips on each, holding taillight in place. **A** Pull out on taillight assembly being sure not to damage the alignment tabs.
2. Starting on the drivers side locate vehicles taillight wiring harness and separate connectors. **B** Insert the T-connector ends with the yellow and brown wires in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.
3. Route the T-connector end with the green wire and the 4-flat wire down through the opening under the taillight assembly. **C** Under the vehicle route the green wire along the backside of the bumper to the passenger side and up through the opening on the passenger side. Repeat step 2 on the passenger side using the green wire.
4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.
5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.
6. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included.
7. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.