

# 56039

MITSUBISHI ENDEAVOR

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

3/27/09

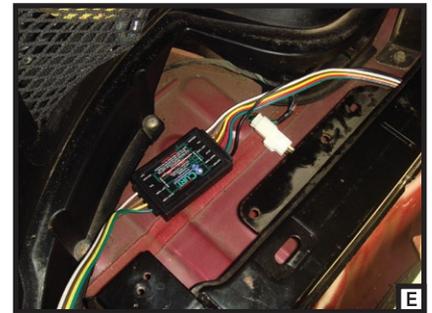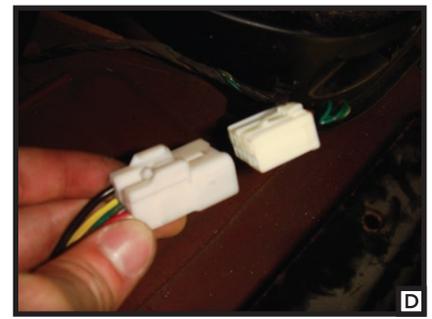

## English

1. Open the rear hatch and remove vehicle floor coverings and spare tire storage cover. **A**  
Remove storage compartment cover on drivers side by removing two cargo anchor brackets using a 10 mm socket. **B**

2. Under the storage compartment locate the vehicles factory tow harness. **C** Insert the harness into the vehicles tow harness. Make sure the connectors are fully inserted with locking tabs in place. **D**

3. Adhere the black converter box to the frame of the car using the double-sided tape provided. **E** Secure any loose parts of the T-connector with the cable ties provided.

4. Route the 4-flat through the grommet in the rear center of spare tire storage area. Slit the grommet and seal the grommet with silicone to make a moisture tight seal. **F**  
Outside the vehicle route the 4-flat to the center of the bumper and secure in a convenient out of the way location using the cable ties provided.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.