

56101

HYUNDAI TUCSON

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

1/21/10

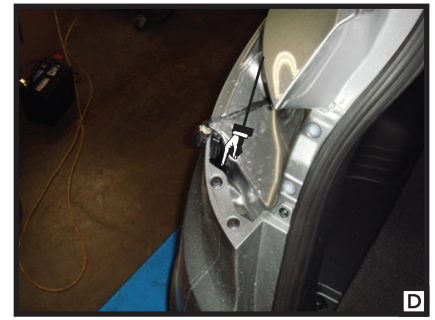

English

1. Open the rear hatch. Remove both taillight assemblies by removing 2 phillips head screws holding them in place. [A] Behind the taillights locate the vehicles taillight wiring harness the harness will have connectors similar to those on the T-connector harness. [B] Separate the connectors being sure not to damage the locking tabs. [C]

2. On the drivers side route the T-connector end with the yellow wire up from underneath the vehicle thru the opening under the taillight. [D] Insert the T-connector end with the yellow wire in-between the separated connectors. [E] Make sure the connectors are fully inserted with locking tabs in place.

3. Route the green wire along the backside off the bumper to the passenger side and up thru the opening under the taillight. Repeat step 2 on the passenger side using the green wire.

4. On the drivers side adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.

5. Locate a suitable grounding point near the converter, such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

6. Route the black power wire from the battery as shown on the CME-PCL-INS sheet included.

7. Re-install anything removed during install.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.



56101