

56129 JEEP COMPASS

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

4/22/2011

English

1. Open the hatch. Remove the taillights by removing the two plastic fasteners holding each in place and pulling out (A).

Note:

Four new fasteners are provided for installation of taillight assemblies.

2. Starting on the driver side locate the vehicle's taillight wiring harness connector (B). The connector will be similar to those on the T-Connector harness. Partially slide out the red lock on the top side of the connector. Separate the connectors taking care not to damage the locking tabs (C). Insert the T-Connector end with the yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place (D).

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white ground wire using ring terminal and screw provided.

5. Adhere the black converter box to the frame of the vehicle using the double-sided tape provided (E).



6. Review the CME-PCL-INS instruction sheet and route the black power wire from the battery to the converter as shown.


7. Route the 4-flat and the T-Connector end with the green wire down under the vehicle. Route the green wire across to the passenger side along the backside of the bumper and up through the opening under the taillight. Repeat Step 2 on the passenger side using T-Connector end with the green wire.

8. Route the 4-flat wire to the center of the vehicle. Secure the 4-flat to the center of the vehicle in a convenient out of the way location. Secure any loose wires with the cable ties provided.

9. Reinstall all items removed during install.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

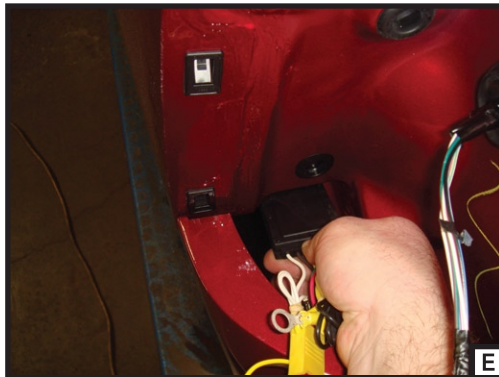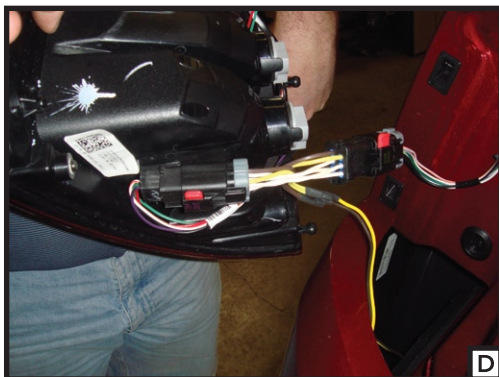

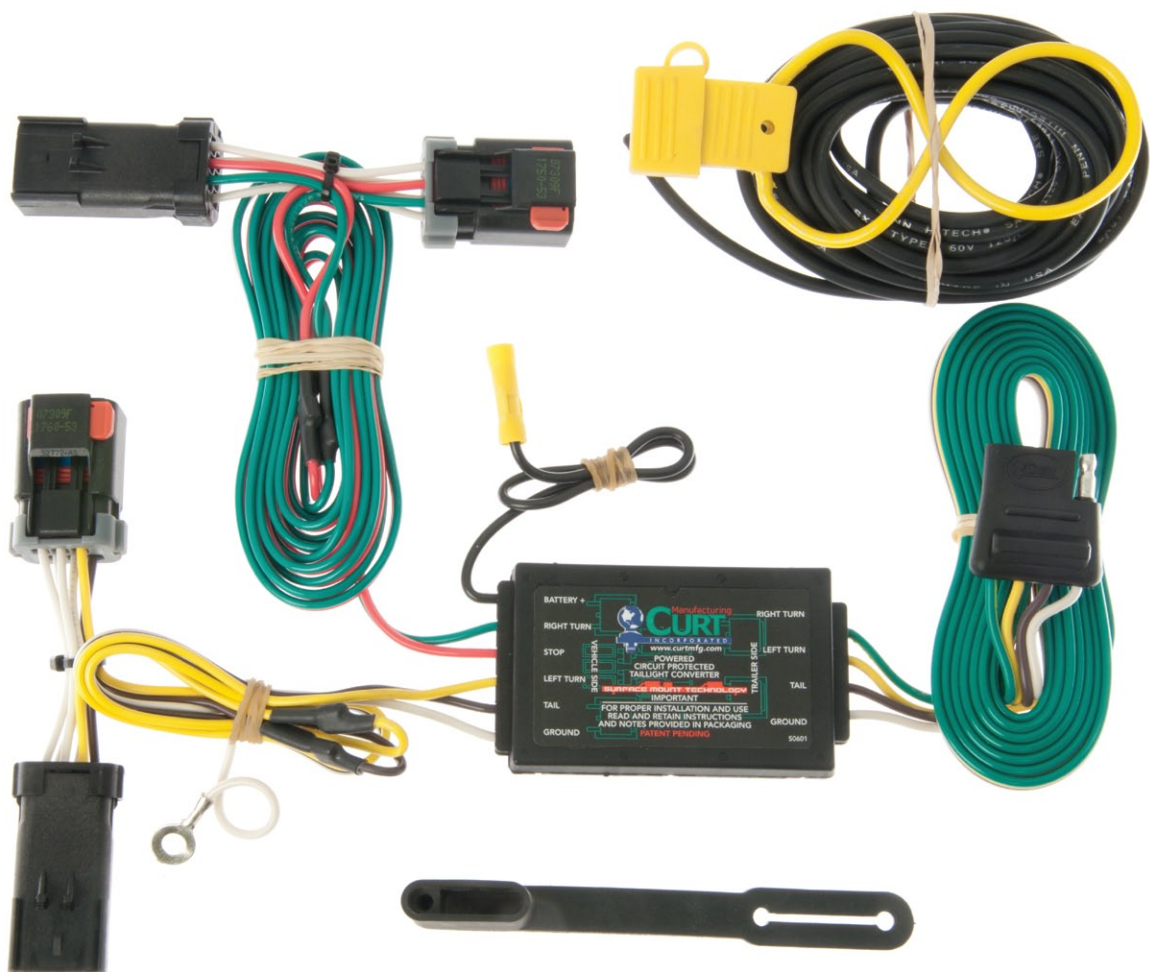

56129